

# Air conditioner


---

## Installation manual

AM\*\*\*KN4DEH

---

- Thank you for purchasing this Samsung air conditioner.
- Before operating this unit, please read this manual carefully and retain it for future reference.

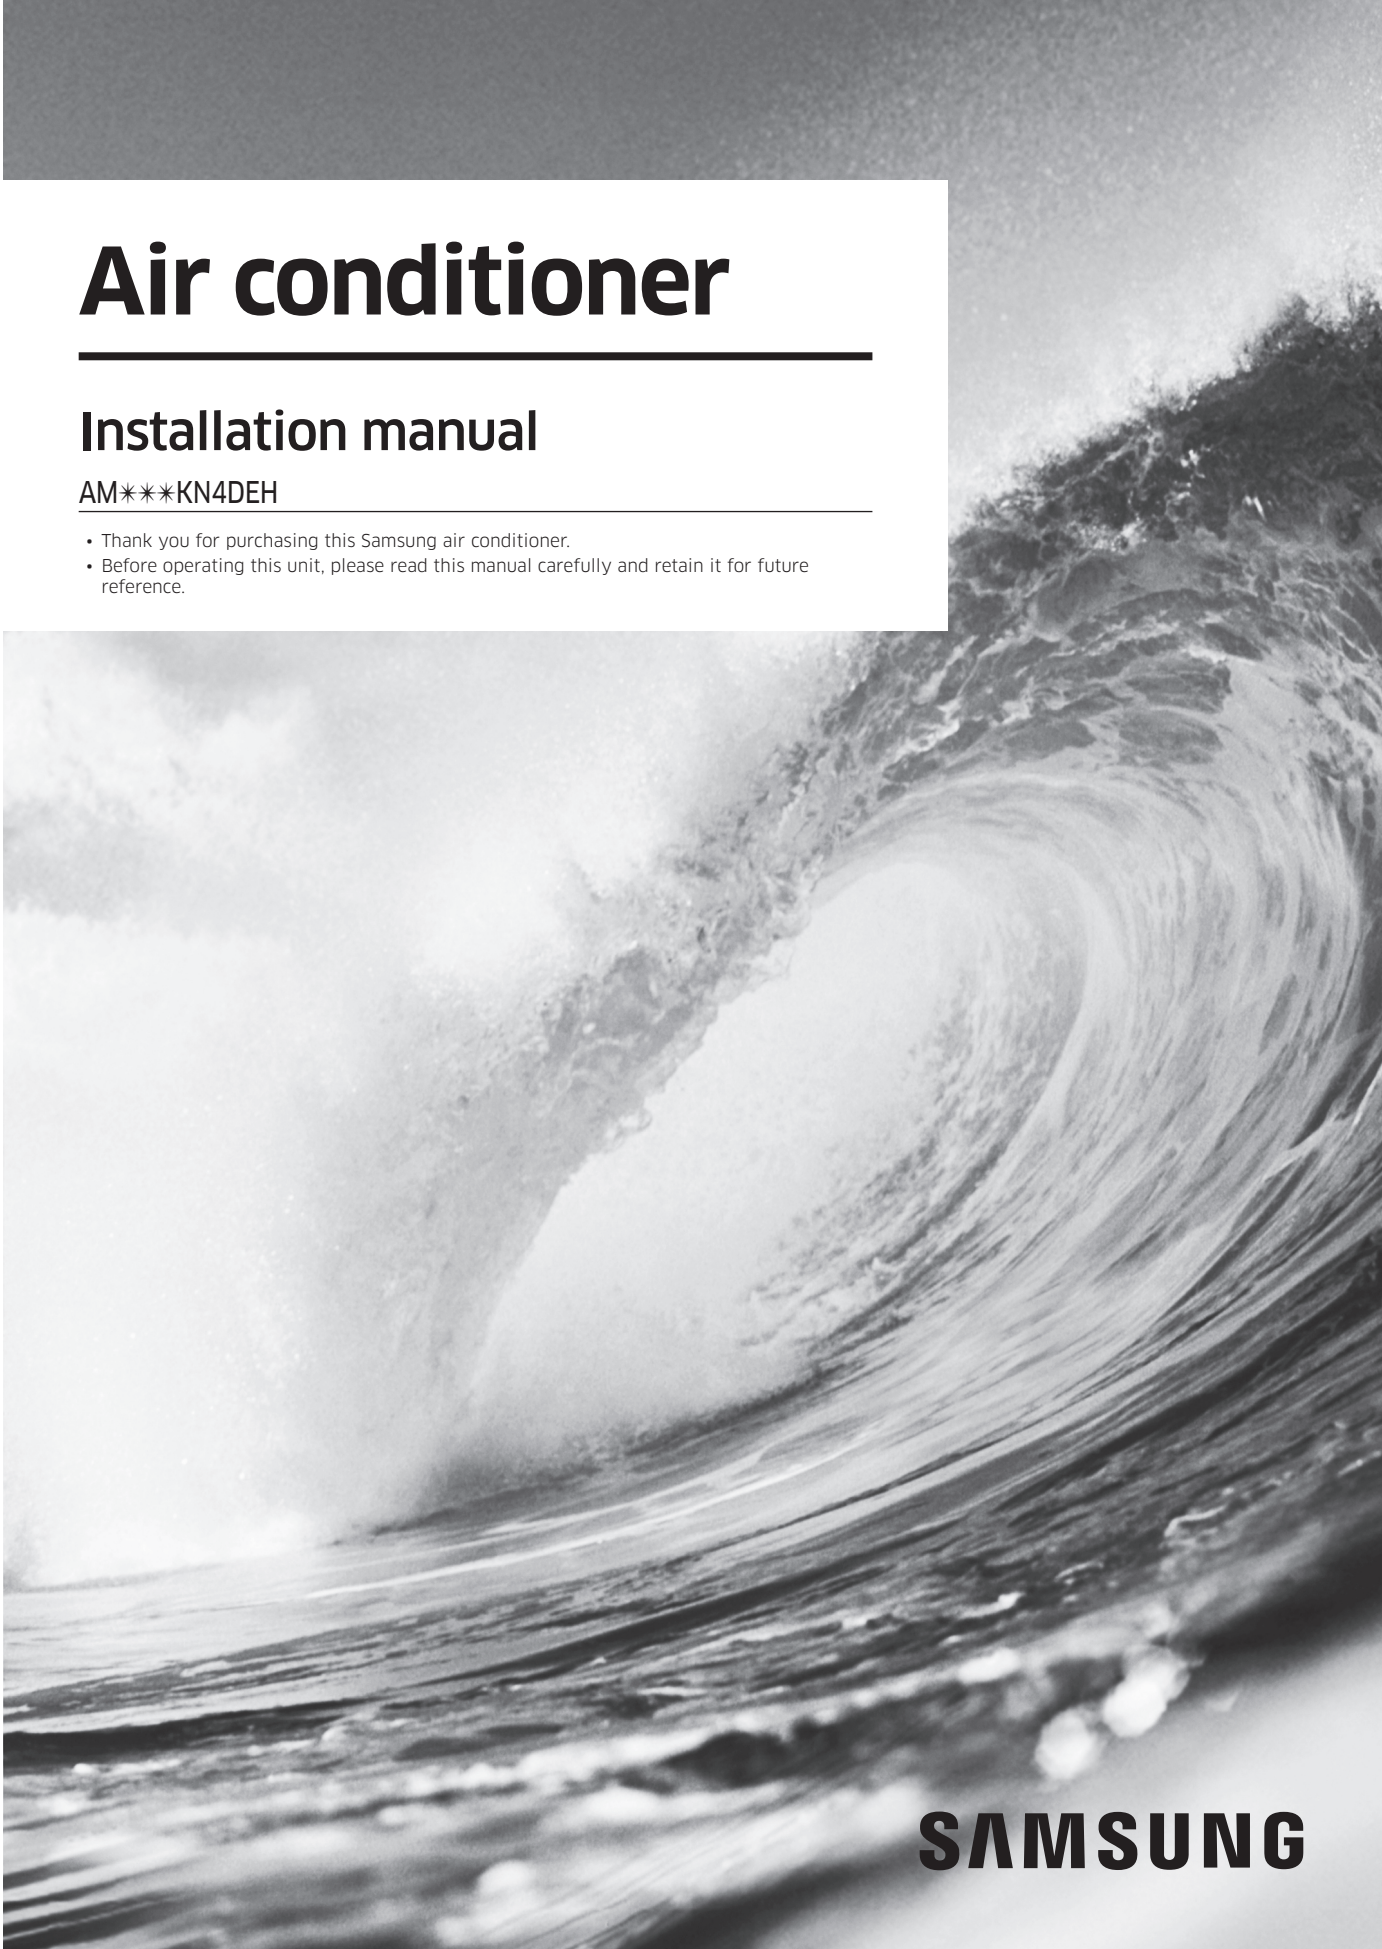

**SAMSUNG**

# Contents

---

|                           |          |
|---------------------------|----------|
| <b>Safety Information</b> | <b>3</b> |
|---------------------------|----------|

---

|                               |          |
|-------------------------------|----------|
| <b>Installation Procedure</b> | <b>5</b> |
|-------------------------------|----------|

---

- Step 1 Checking and preparing accessories
- Step 2 Choosing the installation location
- Step 3 Optional: Insulating the body of the indoor unit
- Step 4 Installing the indoor unit
- Step 5 Purging inert gas from the indoor unit
- Step 6 Cutting and flaring the pipes
- Step 7 Connecting the assembly pipes to the refrigerant pipes
- Step 8 Performing the gas leak test
- Step 9 Insulating the refrigerant pipes
- Step 10 Installing the drain hose and drain pipe
- Step 11 Performing the drainage test
- Step 12 Connecting the power and communication cables
- Step 13 Optional: Extending the power cable
- Step 14 Setting the indoor unit addresses and the installation options

|                 |           |
|-----------------|-----------|
| <b>Appendix</b> | <b>43</b> |
|-----------------|-----------|

---

Troubleshooting

# Safety Information



## WARNING

- Hazards or unsafe practices that may result in severe personal injury or death.



## CAUTION

- Hazards or unsafe practices that may result in minor personal injury or property damage.
- Carefully follow the precautions listed below because they are essential to guarantee the safety of the equipment.



## WARNING

- Always disconnect the air conditioner from the power supply before servicing it or accessing its internal components.
- Verify that installation and testing operations are performed by qualified personnel.
- Verify that the air conditioner is not installed in an easily accessible area.

## General information



## WARNING

- Carefully read the content of this manual before installing the air conditioner and store the manual in a safe place in order to be able to use it as reference after installation.
- For maximum safety, installers should always carefully read the following warnings.
- Store the operation and installation manual in a safe location and remember to hand it over to the new owner if the air conditioner is sold or transferred.
- This manual explains how to install an indoor unit with a split system with two SAMSUNG units. The use of other types of units with different control systems may damage the units and invalidate the warranty. The manufacturer shall not be responsible for damages arising from the use of non compliant units.
- The manufacturer shall not be responsible for damage originating from unauthorized changes or the improper connection of electric and requirements set forth in the "Operating limits" table, included in the manual, shall immediately invalidate the warranty.
- The air conditioner should be used only for the applications for which it has been designed: the indoor unit is not suitable to be installed in areas used for laundry.
- Do not use the units if damaged. If problems occur, switch the unit off and disconnect it from the power supply.
- In order to prevent electric shocks, fires or injuries, always stop the unit, disable the protection switch and contact SAMSUNG's technical support if the unit produces smoke, if the power cable is hot or damaged or if the unit is very noisy.
- Always remember to inspect the unit, electric connections, refrigerant tubes and protections regularly. These operations should be performed by qualified personnel only.
- The unit contains moving parts, which should always be kept out of the reach of children.
- Do not attempt to repair, move, alter or reinstall the unit. If performed by unauthorized personnel, these operations may cause electric shocks or fires.
- Do not place containers with liquids or other objects on the unit.
- All the materials used for the manufacture and packaging of the air conditioner are recyclable.
- The packing material and exhaust batteries of the remote controller(optional) must be disposed of in accordance with current laws.
- The air conditioner contains a refrigerant that has to be disposed of as special waste. At the end of its life cycle, the air conditioner must be disposed of in authorized centres or returned to the retailer so that it can be disposed of correctly and safely.

# Safety Information

## Installing the unit



### WARNING

**IMPORTANT:** When installing the unit, always remember to connect first the refrigerant tubes, then the electrical lines.

- Always disassemble the electric lines before the refrigerant tubes.
- Upon receipt, inspect the product to verify that it has not been damaged during transport. If the product appears damaged, DO NOT INSTALL it and immediately report the damage to the carrier or retailer (if the installer or the authorized technician has collected the material from the retailer.)
- After completing the installation, always carry out a functional test and provide the instructions on how to operate the air conditioner to the user.
- Do not use the air conditioner in environments with hazardous substances or close to equipment that release free flames to avoid the occurrence of fires, explosions or injuries.
- Our units should be installed in compliance with the spaces shown in the installation manual, to ensure accessibility from both sides and allow repairs or maintenance operations to be carried out. The unit's components should be accessible and easy to disassemble without endangering people and objects. For this reason, when provisions of the installation manual are not complied with, the cost required to access and repair the units (in SAFETY CONDITIONS, as set out in prevailing regulations) with harnesses, ladders, scaffolding or any other elevation system will NOT be considered part of the warranty and will be charged to the end customer.

## Power supply line, fuse or circuit breaker



### WARNING

- Always make sure that the power supply is compliant with current safety standards. Always install the air conditioner in compliance with current local safety standards.

- Always verify that a suitable grounding connection is available.
- Verify that the voltage and frequency of the power supply comply with the specifications and that the installed power is sufficient to ensure the operation of any other domestic appliance connected to the same electric lines.
- Always verify that the cut-off and protection switches are suitably dimensioned.
- Verify that the air conditioner is connected to the power supply in accordance with the instructions provided in the wiring diagram included in the manual.
- Always verify that electric connections (cable entry, section of leads, protections...) are compliant with the electric specifications and with the instructions provided in the wiring scheme. Always verify that all connections comply with the standards applicable to the installation of air conditioners.
- Devices disconnected from the power supply should be completely disconnected in the condition of overvoltage category.



### CAUTION

**Make sure that you earth the cables.**

- Do not connect the earth wire to the gas pipe, water pipe, lighting rod or telephone wire. If earthing is not complete, electric shock or fire may occur.

**Install the circuit breaker.**

- If the circuit breaker is not installed, electric shock or fire may occur.

**Make sure that the condensed water dripping from the drain hose runs out properly and safely.**

**Install the power cable and communication cable of the indoor and outdoor unit at least 1m away from the electric appliance.**

**Install the indoor unit away from lighting apparatus using the ballast.**

- If you use the wireless remote control, reception error may occur due to the ballast of the lighting apparatus.





# Installation Procedure

**Do not install the air conditioner in following places.**

- Place where there is mineral oil or arsenic acid. Resin parts flame and the accessories may drop or water may leak. The capacity of the heat exchanger may reduce or the air conditioner may be out of order.
- The place where corrosive gas such as sulphuric acid gas generates from the vent pipe or air outlet.
- The copper pipe or connection pipe may corrode and refrigerant may leak.
- The place where there is a machine that generates electromagnetic waves. The air conditioner may not operate normally due to control system.
- The place where there is a danger of existing combustible gas, carbon fibre or flammable dust.
- The place where thinner or gasoline is handled. Gas may leak and it may cause fire.

## Step 1 Checking and preparing accessories

The following accessories are supplied with the indoor unit. The type and quantity may differ, depending on the specifications.

|                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Insulation pipe (3 ea)                                                              | Cable-tie (6 ea)                                                                    |
|  |  |
| Drain hose (1 ea)                                                                   | Installation manual (1 ea)                                                          |
|  |  |
| Clamp (1 ea)                                                                        | User manual (1 ea)                                                                  |
|  |  |
| Installation template (1 ea)                                                        | Dimension gauge (1 ea)                                                              |
|  |  |










## Step 2 Choosing the installation location

### Installation location requirements

- There must be no obstacles near the air inlet and outlet.
- Install the indoor unit on a ceiling that can support its weight.
- Maintain sufficient clearance around the indoor unit.
- Before installing the indoor unit, be sure to check whether the chosen location is well-drained.
- The indoor unit must be installed such that it is beyond public access and is not touchable by users.

# Installation Procedure

## Indoor unit dimensions
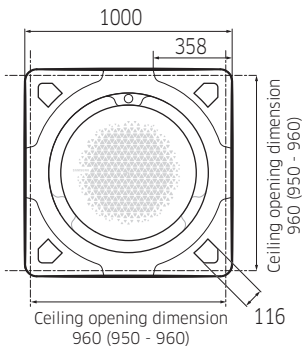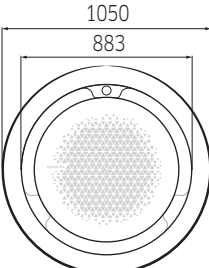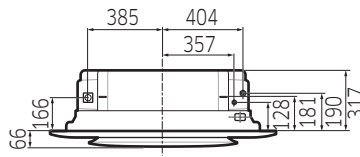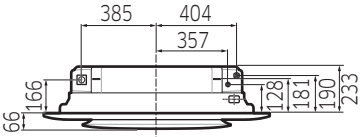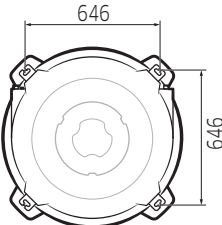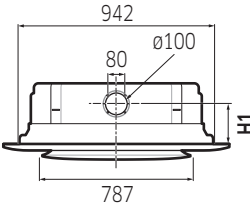
| Category | Square panel                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Circular panel                                                                       |
|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Front    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |    |
| Large    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |    |
| Small    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |  |
| Common   | <div>    </div> <div>   </div> <div> <p>H1 → Large: 180, Small: 150</p> <p>H2 → Large: 152, Small: 122</p> </div> <div> <p>Square panel</p> <p>Circular panel</p> </div> |                                                                                      |


| Model                        | AM045KN4DEH*<br>AM056KN4DEH* | AM071KN4DEH*<br>AM090KN4DEH* | AM112KN4DEH*<br>AM128KN4DEH*<br>AM140KN4DEH* |
|------------------------------|------------------------------|------------------------------|----------------------------------------------|
| Chassis                      | Small                        |                              | Large                                        |
| Net dimension<br>(W × D × H) | mm                           | 947 x 947 x 281              | 947 x 947 x 365                              |

|                        |    |                                              |        |        |
|------------------------|----|----------------------------------------------|--------|--------|
| Net weight             | kg | 21.0                                         | 21.0   | 24.0   |
| Liquid pipe connection |    | ø6.35                                        | ø9.52  | ø9.52  |
| Gas pipe connection    |    | ø12.7                                        | ø15.88 | ø15.88 |
| Drain hose connection  | mm | Outer diameter : ø32, Inner diameter : ø26.5 |        |        |

- The circular panel is by default available in exposed installation.
- Make inspection holes on the ceiling for easier installation and maintenance, as shown in the following table. (The size of an inspection hole must be at least 450 mm x 450 mm.)
- A suspended ceiling structure can substitute for the inspection holes.

| Category       | Inspection hole       |           |                      |
|----------------|-----------------------|-----------|----------------------|
|                | Recessed installation |           | Exposed installation |
|                | Integrated            | suspended |                      |
| Square panel   | 1 ea                  | -         |                      |
| Circular panel | 2 ea                  |           |                      |



- For the recessed installation of the circular panel

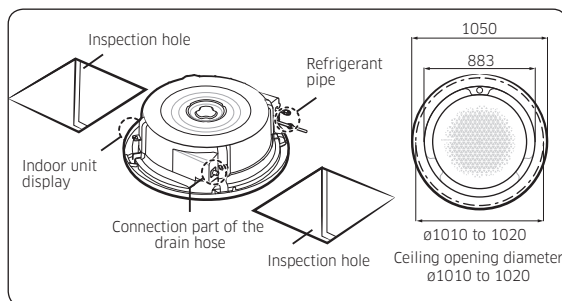

#### NOTE

The clearance between the panel and the inspection hole is 15 to 20 mm on a side.

## Spacing requirements

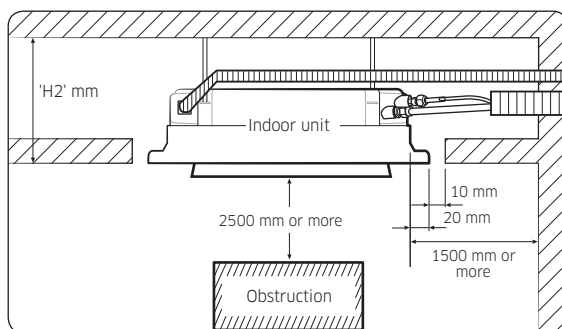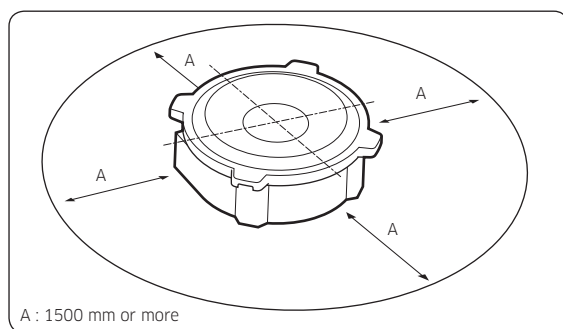


Unit: mm

| Model | AM045KN4DEH*<br>AM056KN4DEH* | AM071KN4DEH*<br>AM090KN4DEH* | AM112KN4DEH*<br>AM128KN4DEH*<br>AM140KN4DEH* |
|-------|------------------------------|------------------------------|----------------------------------------------|
| H2    | 261                          | 261                          | 345                                          |

# Installation Procedure

## ⚠ CAUTION


- The indoor unit must be installed according to the specified distances in order to permit accessibility from each side, to guarantee correct operation, maintenance, and repair of the unit.  
The components of the indoor unit must be reachable and removable under safe conditions for people and the unit.
- Do not hold the discharge while carrying the indoor unit to avoid the possibility of breakage.
- You must hold the hanger plate on the corner and carry the indoor unit.

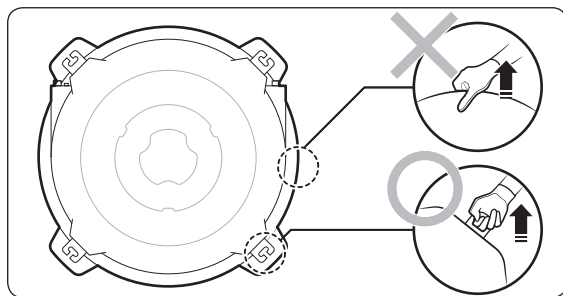

## Step 3 Optional: Insulating the body of the indoor unit

If you install a cassette type indoor unit on the ceiling when temperature is over 27°C and humidity is over 80%, you must apply an extra 10 mm thick polyethylene insulation or a similar type of insulation to the body of the indoor unit.

Cut away the part where pipes are pulled out for the insulating work.

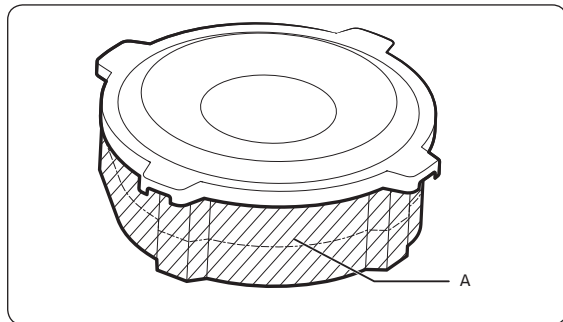

Insulate the end of the pipe and some curved area by using separate insulator.

## 📄 NOTE


- A: Reference for the outer circumference of the unit (When insulating the body of the indoor unit, use A as the reference for its outer circumference.)

| Indoor unit type and models                    |                                                              | Dimensions |
|------------------------------------------------|--------------------------------------------------------------|------------|
| All way cassette type <S><br>(947 x 947 x 281) | AM045KN4DEH*<br>AM056KN4DEH*<br>AM071KN4DEH*<br>AM090KN4DEH* | 2610 x 130 |
| All way cassette type <L><br>(947 x 947 x 365) | AM112KN4DEH*<br>AM128KN4DEH*<br>AM140KN4DEH*                 | 2610 x 215 |

## Step 4 Installing the indoor unit

When deciding on the location of the air conditioner the following restrictions must be taken into account.

- Determine the positions of the pipe and the drain hose hole as shown in the pattern sheet, and drill the hole with an inner diameter of 14 mm.

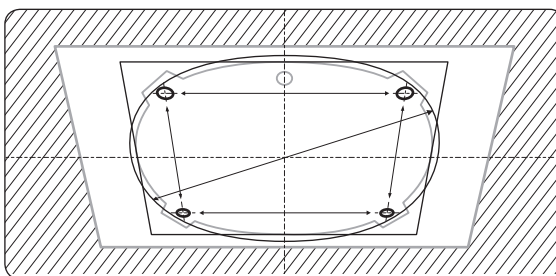


## 📄 NOTE


- Since the diagram is made of paper, it may shrink or stretch slightly due to temperature or humidity. For this reason, before drilling the holes, be sure to maintain the correct dimensions between the markings.

2 Perform the following steps to install inspection holes in accordance with the panel type.


- a For the recessed installation of the square panel.
  - Install an inspection hole to the direction of connection parts of the refrigerant pipe and the drain hose. (1 point)

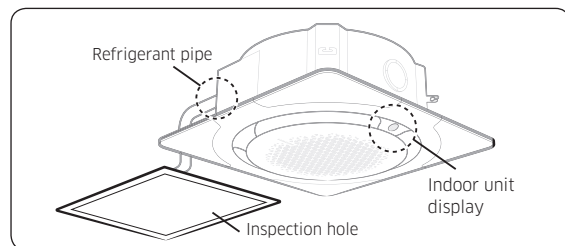


- b For recessed installation of the circular panel
  - Install inspection holes to both directions of the connection part of the refrigerant pipe and the drain hose and of the indoor unit display. (2 points)

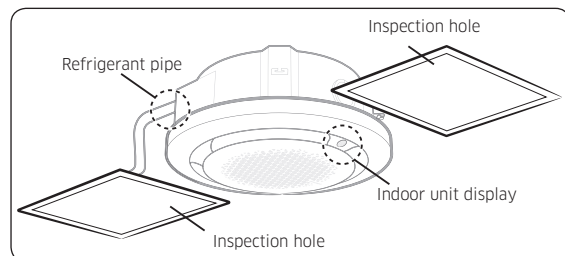

3 Insert bolt anchors, use existing ceiling supports or construct a suitable support as shown in figure.

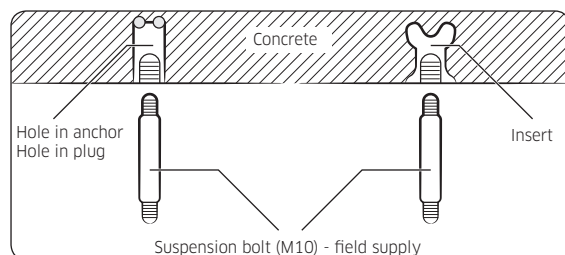

4 Install the suspension bolts, depending on the ceiling type.

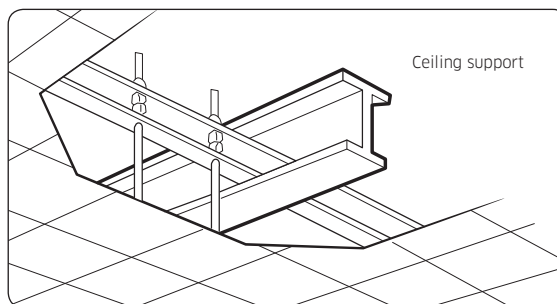


### CAUTION

- Make sure that the ceiling is strong enough to support the weight of the indoor unit. Before hanging the unit, test the strength of each attached suspension bolt.
  - If the length of the suspension bolt is more than 1.5 m, you are required to prevent vibration.
- 5 Screw eight nuts and washers to the suspension bolts, making space for hanging the indoor unit.

### CAUTION

- You must install all of the suspension rods.
- It is important to leave sufficient space in the false ceiling to allow access for maintenance or repairs to the drainage pipe connection, the refrigerant pipe connection, or to remove the unit if necessary.

6 Hang the indoor unit to the suspension bolts between two nuts. Screw the nuts to suspend the unit. Cut a pad stopper and place it on the bracket at this time

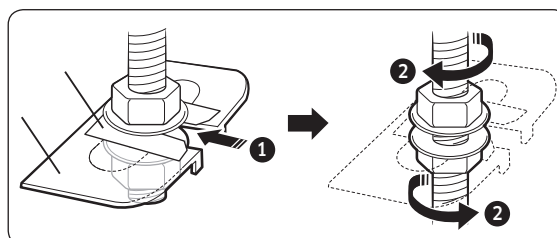




# Installation Procedure

7 Adjust the unit to the appropriate position, taking into account the installation area for the front panel.


- Place the pattern sheet on the indoor unit.
- Adjust the space between the ceiling and the indoor unit by using a dimension gauge.
- Fix the indoor unit securely after adjusting the level of the unit by using a leveller.
- Remove the pattern sheet and install the front panel.

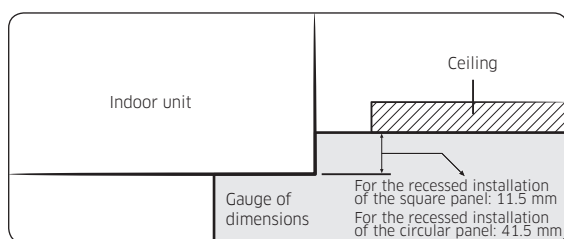

## Step 5 Purging inert gas from the indoor unit

The indoor unit comes with nitrogen gas (inert gas) charged at the factory. Therefore, all inert gas must be purged before connecting the assembly piping.

**Unscrew the pinch pipe at the end of each refrigerant pipe.**

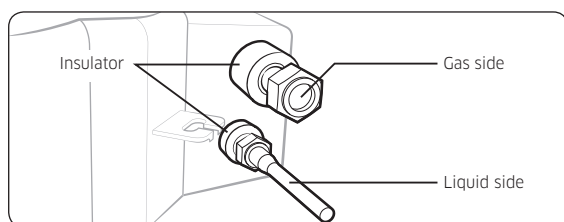


### NOTE


- To prevent dirt or foreign objects from getting into the pipes during installation, do not remove the pinch pipe completely until you are ready to connect the piping.

## Step 6 Cutting and flaring the pipes

- 1 Make sure that you have the required tools available: pipe cutter, reamer, flaring tool, and pipe holder.
- 2 If you wish to shorten the pipes, cut them with a pipe cutter, ensuring that the cut edge remains at a 90° angle to the side of the pipe. Refer to the illustrations below for examples of edges cut correctly and incorrectly.

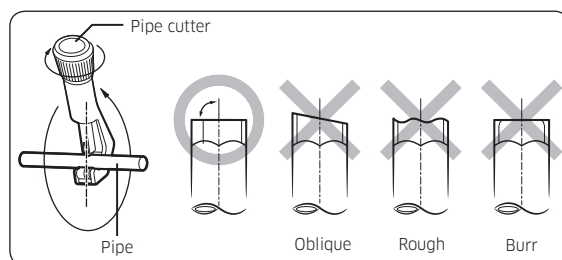


- 3 To prevent any gas from leaking out, remove all burrs at the cut edge of the pipe, using a reamer.
- 4 Slide a flare nut on to the pipe and modify the flare.

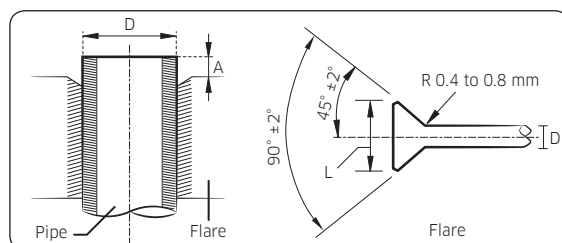

| Outer Diameter (D) | Depth (A) | Flare dimension (L) |
|--------------------|-----------|---------------------|
| Ø6.35 mm           | 1.3 mm    | 8.7 to 9.1 mm       |
| Ø9.52 mm           | 1.8 mm    | 12.8 to 13.2 mm     |
| Ø12.70 mm          | 2.0 mm    | 16.2 to 16.6 mm     |
| Ø15.88 mm          | 2.2 mm    | 19.3 to 19.7 mm     |
| Ø19.05 mm          | 2.2 mm    | 23.6 to 24.0 mm     |


- 5 Check that the flaring is correct, referring to the illustrations below for examples of incorrect flaring.

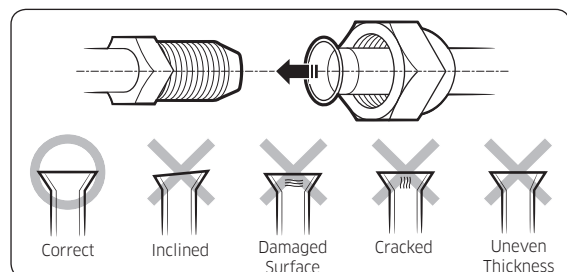

## Step 7 Connecting the assembly pipes to the refrigerant pipes

There are two refrigerant pipes of different diameters :

- A smaller one for the liquid refrigerant.
  - A larger one for the gas refrigerant. The inside of copper pipe must be clean and has no dust.
- 1 Remove the pinch pipe on the pipes and connect the assembly pipes to each pipe, tightening the nuts, first manually and then with a torque wrench, a spanner applying the following torque.

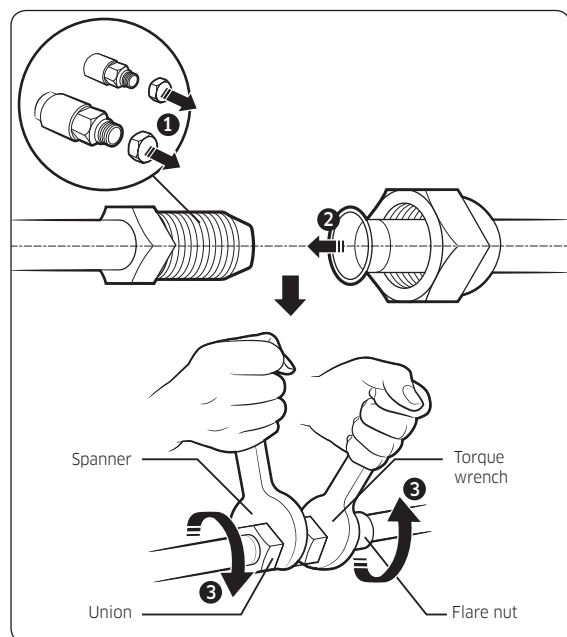

| Outer Diameter (mm) | Torque (N•m) |
|---------------------|--------------|
| Ø6.35               | 14 to 18     |
| Ø9.52               | 34 to 42     |
| Ø12.70              | 49 to 61     |
| Ø15.88              | 68 to 82     |
| Ø19.05              | 100 to 120   |

(1 N•m=10kgf•cm)

### NOTE

- If the pipes must be shortened, see **Step 6 Cutting and flaring the pipes** on page 10.
- 2 Be sure to use an insulator thick enough to cover the refrigerant tube to protect the condensate water on the outside of the pipe falling onto the floor and to improve the efficiency of the unit.
  - 3 Cut off any excess foam insulation.
  - 4 Make sure that there are no cracks or waves on the bent area.
  - 5 It would be necessary to double the insulation thickness (10 mm or more) to prevent condensation even on the insulator when if the installed area is warm and humid.
  - 6 Do not use joints or extensions for the pipes connecting the indoor and outdoor units. The only permitted connections are those for which the units are designed.

# Installation Procedure

## ⚠ CAUTION


- Connect the indoor and outdoor units using pipes with flared connections (not supplied). For the lines, use insulated, unwelded, degreased and deoxidized copper pipe (Cu DHP type to ISO 1337 or UNI EN 12735-1), suitable for operating pressures of at least 4.2 MPa and for a burst pressure of at least 20.7 MPa. Copper pipe for hydro-sanitary applications is completely unsuitable.
- For sizing and limits (height difference, line length, max. bends, refrigerant charge, etc.) see the outdoor unit installation manual.
- All refrigerant connection must be accessible, in order to permit either unit maintenance or removing it completely.
- If the pipes require brazing, make sure that oxygen free nitrogen (OFN) is flowing through the system.
- Nitrogen blowing pressure range is 0.02 to 0.05 MPa.

## Step 8 Performing the gas leak test

To identify potential gas leaks on the indoor unit, inspect the connection area of each refrigerant pipe using a leak detector for R-410A.

Before recreating the vacuum and recirculating the refrigerant gas, pressurize the whole system with nitrogen (using a cylinder with a pressure reducer) at a pressure above 4 MPa in order to immediately detect leaks on the refrigerant fittings.


Made vacuum for 15 minutes and pressurizing system with nitrogen.

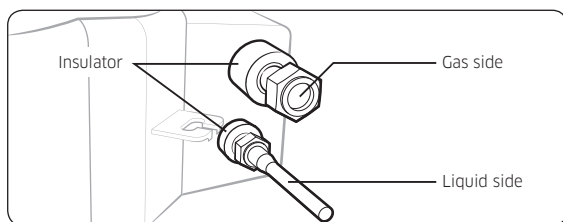

## Step 9 Insulating the refrigerant pipes

Once you have checked that there are no leaks in the system, you can insulate the piping and hose.

- 1 To avoid condensation problems, place Acrylonitrile Butadiene Rubber separately around each refrigerant pipe.

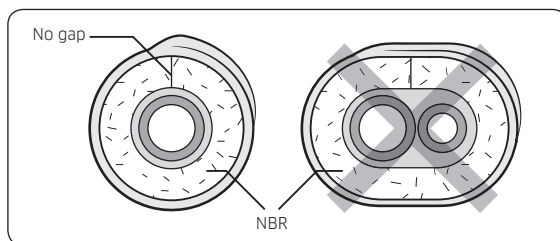


## 📖 NOTE

- Always make the seam of pipes face upwards.


## ⚠ CAUTION

- The insulation has to be produced in full compliance with European regulation EEC / EU 2037 / 2000 requiring the use of sheaths insulation without using CFC and HCFC gases for health and the environment.
- 2 Wind insulating tape around the pipes and drain hose avoiding compressing the insulation too much.
- 3 Finish wrapping insulating tape around the rest of the pipes leading to the outdoor unit.
- 4 The pipes and electrical cables connecting the indoor unit with the outdoor unit must be fixed to the wall with suitable ducts.

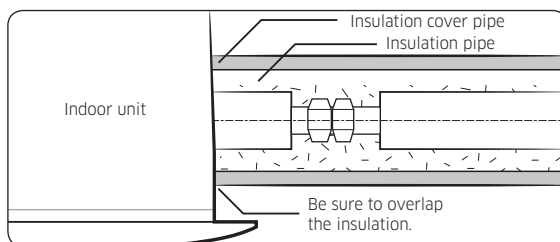

## ⚠ CAUTION

- Install the insulation not to get wider and use the adhesives on the connection part of it to prevent moisture from entering.
- Wind the refrigerant pipe with insulation tape if it is exposed to outside sunlight.
- Install the refrigerant pipe respecting that the insulation does not get thinner on the bent part or hanger of pipe.
- Add the additional insulation if the insulation plate gets thinner.

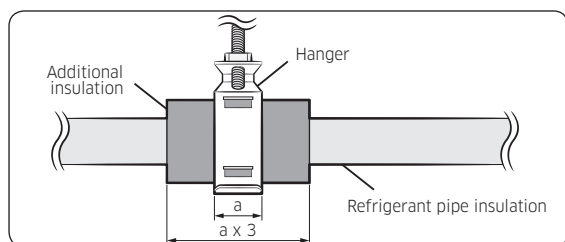

- Must fit tightly against body without any gap.
  - All refrigerant connection must be accessible, in order to permit either unit maintenance or removal.
- 5** Select the insulation of the refrigerant pipe.
- Insulate the gas side and liquid side pipe, noting the insulation thickness that must differ according to the pipe size.
  - Standard: Less than an indoor temperature of 30°C, with humidity at 85%. If installing in a high humidity environment, use one grade thicker insulator by referring to the table below. If installing in an unfavourable environment, use thicker one.
  - The heat-resistance temperature of the insulator must be more than 120°C.

| Pipe        | Pipe size        | Insulation Type (Heating/Cooling) |                                   | Remarks                                   |
|-------------|------------------|-----------------------------------|-----------------------------------|-------------------------------------------|
|             |                  | Standard<br>[30°C, 85%]           | High humidity<br>[30°C, over 85%] |                                           |
|             |                  | EPDM, NBR                         |                                   |                                           |
| Liquid pipe | Ø6.35 to Ø9.52   | 9t                                | ←                                 | Internal temperature is higher than 120°C |
|             | Ø12.7 to Ø50.80  | 13t                               | ←                                 |                                           |
| Gas pipe    | Ø6.35            | 13t                               | 19t                               |                                           |
|             | Ø9.52 to Ø25.40  | 19t                               | 25t                               |                                           |
|             | Ø28.58 to Ø44.45 |                                   | 32t                               |                                           |
|             | Ø50.80           | 25t                               | 38t                               |                                           |


# Installation Procedure

- When installing insulation in the places and conditions below, use the same insulation that is used for high humidity conditions.

| <Geological condition>                                                                                                                                                                                                                                                                    |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| High humidity locations such as shorelines, hot springs, lake or riversides, and ridges (when part of the building is covered by earth and sand)                                                                                                                                          |
| <Operation purpose condition>                                                                                                                                                                                                                                                             |
| Restaurant ceiling, sauna, swimming pool etc.                                                                                                                                                                                                                                             |
| <Building construction condition>                                                                                                                                                                                                                                                         |
| Ceilings frequently exposed to moisture and cooling are not covered. For example, pipes installed at a corridor of a dormitory and studio or near an exit that opens and closes frequently.<br>Places (where the pipes are installed) that are highly humid due to a lack of ventilation. |



## Step 10 Installing the drain hose and drain pipe

- Push the supplied drain hose as far as possible over the drain socket.
- Tighten the metal clamp as shown in the picture.

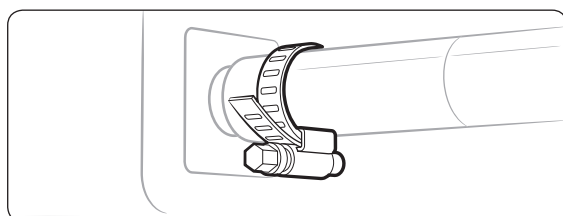

- Wrap the supplied large sealing pad over the metal clamp and drain hose to insulate and fix it with clamps.
- Insulate the complete drain piping inside the building (field supply).  
If the drain hose cannot be sufficiently set on a slope, fit the hose with drain raising piping (field supply).


- Push the drain hose up to insulation when connecting the drain hose to drain socket.

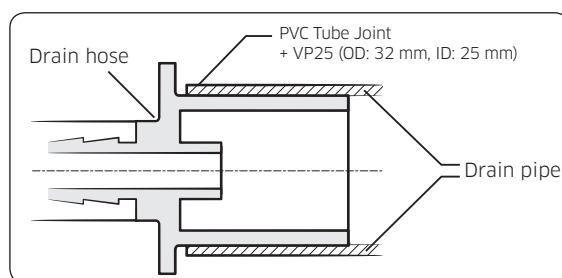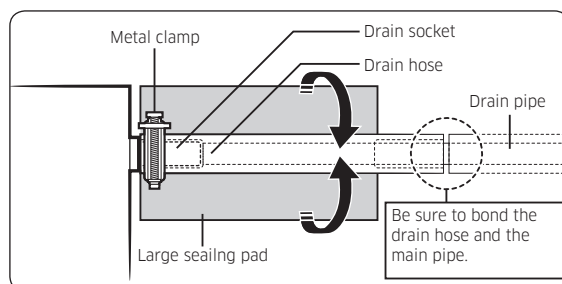


### ⚠ CAUTION

Check that the indoor unit is level with the ceiling by using the leveller.


- Install air ventilation to drain condensation smoothly.

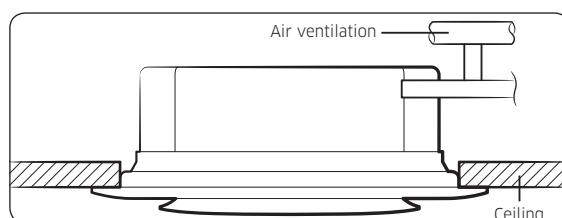


- If it is necessary to increase the height of the drain pipe, install the drain pipe straight within 300 mm from the drain hose port. If it is raised higher than 550 mm, there may be water leaks.

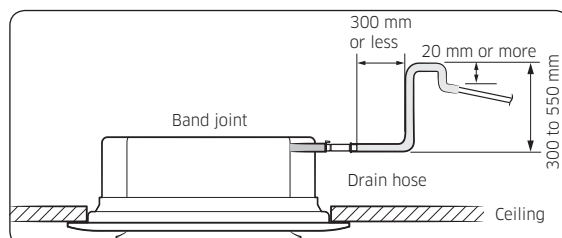


- Do not give the hose an upward gradient beyond the connection port. This will cause water to flow backwards when the unit is stopped, resulting in water leaks.

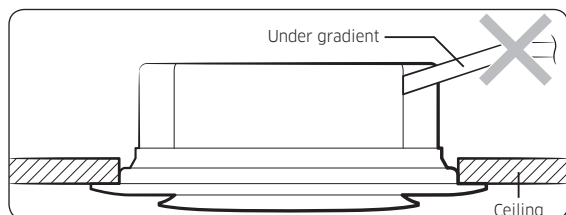


- Do not apply force to the piping on the unit side when connecting the drain hose. The hose should not be allowed to hang loose from its connection to the unit. Fasten the hose to a wall, frame or other support as close to the unit as possible.

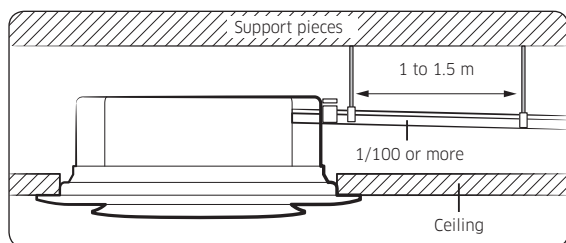


- Install horizontally.

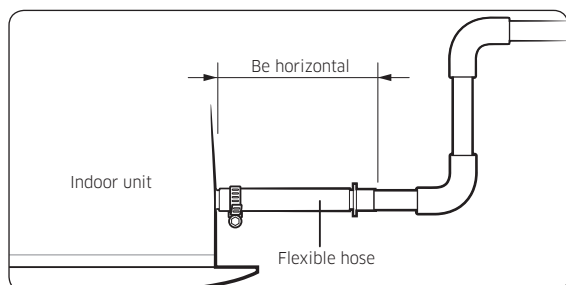

- Max. allowable axis gap

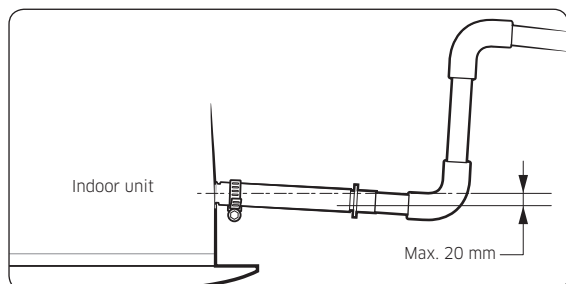


- Max. allowable bending angle

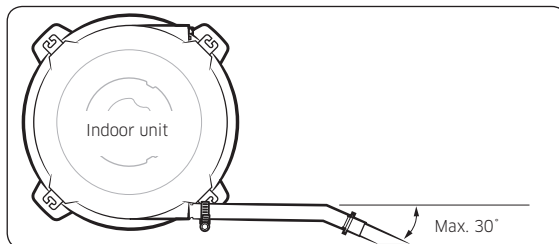

### NOTE


- If a concentrated drain pipe is installed, refer to the figure below.

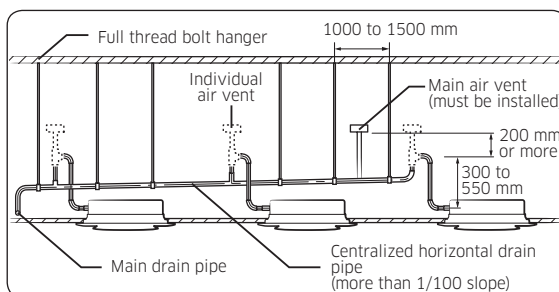

- If 3 or more units are installed, install the main air vent at the front of the farthest indoor unit from the main drain pipe.
- To prevent water from flowing back to indoor units, install an individual air vent at the top of each indoor unit.
  - The air vents should be T or 7 shaped to prevent dust or foreign substances from entering.
  - You may not need to install air vent if the horizontal drain pipe is in proper slope.

## Step 11 Performing the drainage test

- Do a leak test at the connection part of the flexible hose and the drain pipe:
  - Connect a general hose to the connection part of the flexible hose of the indoor unit, and pour in some water.

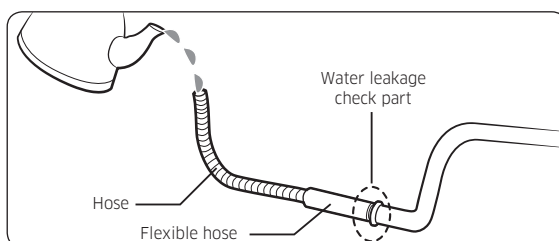

# Installation Procedure

- b After pouring some water, reassemble the rubber cap on the connection part of a flexible hose of the indoor unit and firmly tighten it with a band to prevent leakage.
- c Check the leak test at the part where the adhesive for the flexible hose and the drain pipe is used.

## CAUTION

- The leak test must be performed for at least 24 hours.

### 2 Check the condensed water drainage:

- a Pour about 2 liters of water into the indoor unit drain pan as shown in the picture.



- b When the electric cable connection is completed
  - Turn on the indoor unit and outdoor unit.
  - Operate in the Cool mode.

## CAUTION

- Only in the Cool mode, you can check the correct operation of the drain pump.

When the electric cable connection has not been completed

- Remove the control box cover of the indoor unit.
- Connect the power supply (220V, 50 Hz) to the L and N terminals.
- Reassemble the control box cover and turn on the indoor unit.


## CAUTION

- When the float switch is not detected due to insufficient water on the drain pan, the drain pump will not work.
- If the power supply is directly connected to the L and N terminals, communication error message might appear.

- After completing the drainage check, turn the unit off and disconnect the power supply.
- Reassemble the control box cover.
- c Check whether the drain pump works correctly.
- d Check whether the drainage is performing correctly at the end of the drain pipe.
- e Check for leakage at the drain pipe and drain pipe connection part.
- f When leakage occurs, check whether the indoor unit is level and check the drain hose connection part, drainpipe connection part and drain pump connection.
- g When the drainage check is completed and the condensed water remains on the drain pan, remove the water.

## Step 12 Connecting the power and communication cables

### Power and communication cable connection

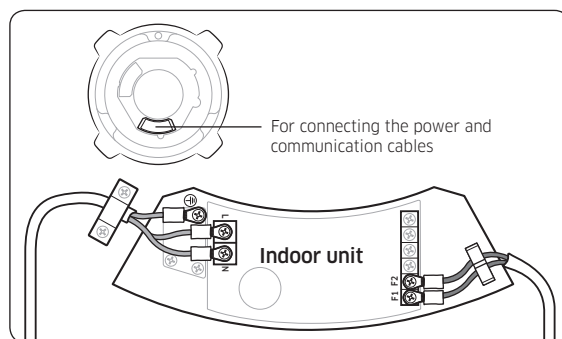

- Before wiring work, you must turn off all power source.
- Connect the power and communication cable among the units within maximum length to set the voltage drop under 10%.
- The auxiliary circuit breaker (ELCB, MCCB, ELB) should be considered more capacity if many indoor units are connected from one breaker.
- Connect F3, F4(for communication) to the communication cable of the wired remote control.





- Tighten the electric wires with a proper tool within the torque limit to connect and fix them firmly, and then organize the wires to prevent outside pressure being exerted on the covers and other parts. Failure to do so may result in overheating, electric shock, and fire.

| Tightening torque (N•m) |            |
|-------------------------|------------|
| M3.5                    | 0.8 to 1.2 |
| M4                      | 1.2 to 1.8 |


- To protect the product from water and possible shock, you should keep the power and the communication cables of the indoor and outdoor units in the iron pipe.
- Connect the power cable to the auxiliary circuit breaker (ELCB, MCCB, ELB).
- Keep distances of 50mm or more between power cable and communication cables.

- Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord. (Code designation IEC:60245 IEC 57 / CENELEC: H05RN-F or IEC:60245 IEC 66 / CENELEC: H07RN-F)
- Screws on terminal block must not be unscrewed with the torque less than 12 kgf•cm.
- When installing the indoor unit in a computer room, use the double shielded (tape aluminum / polyester braid + copper) cable of FROHH2R type.

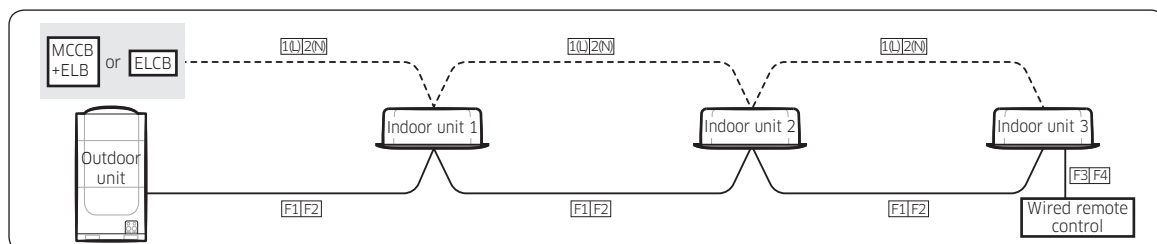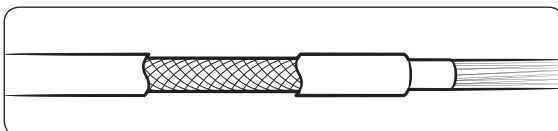

## Selecting the crimping terminal lug


- 1 Select the crimping terminal lug based on the nominal dimension of the power cable.
- 2 Cover the connection part of the power cable and crimping terminal lug to insulate it.

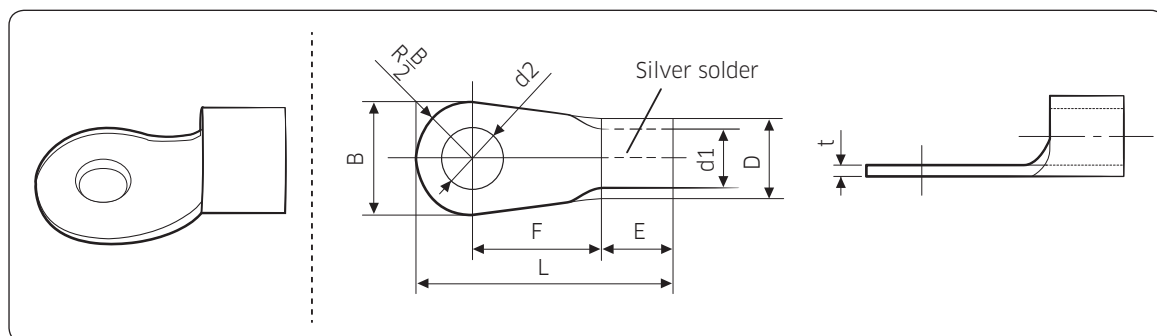

# Installation Procedure

| Normal dimensions for cable (mm <sup>2</sup> ) | Normal dimensions for screw (mm) | B                       |                | D                       |                | d1                      |                | E    | F    | L    | d2                      |                | t    |
|------------------------------------------------|----------------------------------|-------------------------|----------------|-------------------------|----------------|-------------------------|----------------|------|------|------|-------------------------|----------------|------|
|                                                |                                  | Standard dimension (mm) | Allowance (mm) | Standard dimension (mm) | Allowance (mm) | Standard dimension (mm) | Allowance (mm) | Min. | Min. | Max. | Standard dimension (mm) | Allowance (mm) | Min. |
| 1.5                                            | 4                                | 6.6                     | ± 0.2          | 3.4                     | +0.3<br>-0.2   | 1.7                     | ± 0.2          | 4.1  | 6    | 16   | 4.3                     | +0.2<br>0      | 0.7  |
|                                                | 4                                | 8                       |                |                         |                |                         |                |      |      |      |                         |                |      |
| 2.5                                            | 4                                | 6.6                     | ± 0.2          | 4.2                     | +0.3<br>-0.2   | 2.3                     | ± 0.2          | 6    | 6    | 17.5 | 4.3                     | +0.2<br>0      | 0.8  |
|                                                | 4                                | 8.5                     |                |                         |                |                         |                |      |      |      |                         |                |      |
| 4                                              | 4                                | 9.5                     | ± 0.2          | 5.6                     | +0.3<br>-0.2   | 3.4                     | ± 0.2          | 6    | 5    | 20   | 4.3                     | +0.2<br>0      | 0.9  |

## Specifications of the terminal blocks

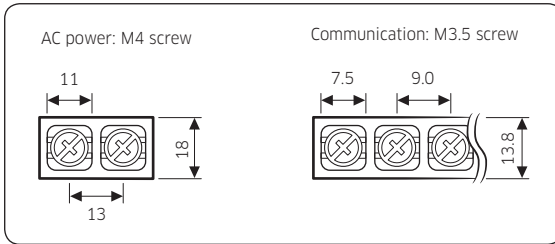

| Power supply (single phase) | MCCB                | ELB                         |
|-----------------------------|---------------------|-----------------------------|
| Min : 198V<br>Max : 242V    | XA                  | XA, 30 mA<br>0.1 s          |
| Power cable                 | Earth cable         | Communication cable         |
| 2.5 mm or more              | 2.5 mm <sup>2</sup> | 0.75 to 1.5 mm <sup>2</sup> |

Decide the power cable specification and maximum length by formula **2**.

- Decide the capacity of ELB and MCCB by below formula.

$$\text{The capacity of ELB, MCCB } X[A] = 1.25 \times 1.1 \times \Sigma A_i$$

### NOTE

- X : The capacity of ELB, MCCB
- $\Sigma A_i$  : Sum of rating currents of each indoor unit.

## Rated currents

| Model        | Rating current(A) |
|--------------|-------------------|
| AM045KN4DEH* | 0.18              |
| AM056KN4DEH* | 0.21              |
| AM071KN4DEH* | 0.25              |
| AM090KN4DEH* | 0.42              |
| AM112KN4DEH* | 0.41              |
| AM128KN4DEH* | 0.62              |
| AM140KN4DEH* | 0.75              |

- Decide the power cable specification and maximum length within 10% voltage drop among indoor units.


$$\sum_{k=1}^n \left( \frac{\text{Coef} \times 35.6 \times L_k}{1000 \times A_k} \times i_k \right) < 10\% \text{ of input voltage}[V]$$

### NOTE

- Coef: 1.55
- L<sub>k</sub>: Distance among each indoor unit[m], A<sub>k</sub>: Power cable specification[mm<sup>2</sup>]
- i<sub>k</sub>: Running current of each unit[A]

### Example of Installation

Total power cable length L = 100(m), Initial pull-in current = 10[A], Running current of each units = 1[A], Total 10 indoor units were installed

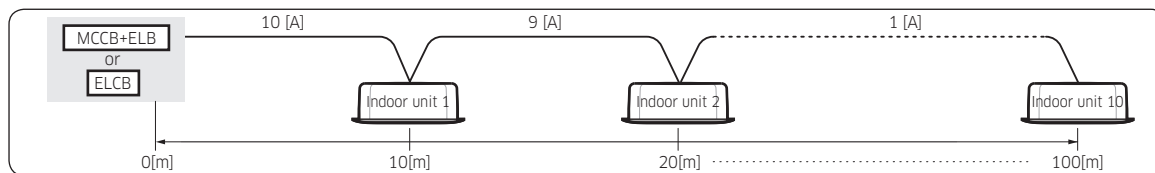

- Apply following equation.

$$\sum_{k=1}^{n} \left( \frac{\text{Coef} \times 35.6 \times L_k \times i_k}{1000 \times A_k} \right) < 10\% \text{ of input voltage [V]}$$

- Calculation
  - Installing with 1 sort wire.

$$\begin{array}{|c|c|c|c|c|} \hline 2.5 \text{ [mm}^2\text{]} & 2.5 \text{ [mm}^2\text{]} & \dots\dots\dots & 2.5 \text{ [mm}^2\text{]} & \dots\dots\dots \\ \hline -2.2 \text{ [V]} & -2.0 \text{ [V]} & & & \end{array} \rightarrow \text{Within 198V to 242V}$$

220 [V] 208.8 [V] : Applicable

$$-(2.2+2.0+1.8+1.5+1.3+1.1+0.9+0.7+0.4+0.2) = -11.2 \text{ [V]}$$

- Installing with 2 different sort wire.

$$\begin{array}{|c|c|c|c|c|} \hline 4.0 \text{ [mm}^2\text{]} & 4.0 \text{ [mm}^2\text{]} & \dots\dots\dots & 2.5 \text{ [mm}^2\text{]} & \dots\dots\dots \\ \hline -1.4 \text{ [V]} & -1.2 \text{ [V]} & & & \end{array} \rightarrow \text{Within 198V to 242V}$$

220 [V] 209.5 [V] : Applicable

$$-(1.4+1.2+1.8+1.5+1.3+1.1+0.9+0.7+0.4+0.2) = -10.5 \text{ [V]}$$

## Step 13 Optional: Extending the power cable


- 1 Prepare the following tools.

| Tools                  | Spec           | Shape |
|------------------------|----------------|-------|
| Crimping pliers        | MH-14          |       |
| Connection sleeve (mm) | 20xØ6.5 (HxOD) |       |
| Insulation tape        | Width 19 mm    |       |
| Contraction tube (mm)  | 70xØ8.0 (LxOD) |       |


- 2 As shown in the figure, peel off the shields from the rubber and wire of the power cable.
  - Peel off 20 mm of the wire shields of the tube.

### CAUTION

- For information about the power cable specifications for indoor and outdoor units, refer to the installation manual.
- After peeling off the tube wire, you must insert a contraction tube.

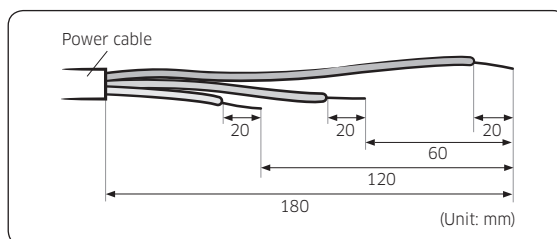


- 3 Insert both sides of core wire of the power cable into the connection sleeve.
  - **Method 1:** Push the core wire into the sleeve from both sides.
  - **Method 2:** Twist the wire cores together and push it into the sleeve.

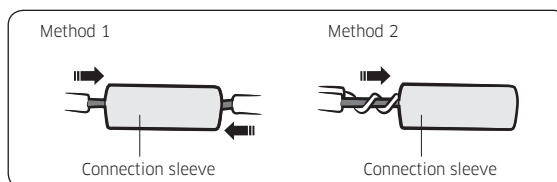


# Installation Procedure

- 4 Using a crimping tool, compress the two points and flip it over and compress another two points in the same location.


- The compression dimension should be 8.0.

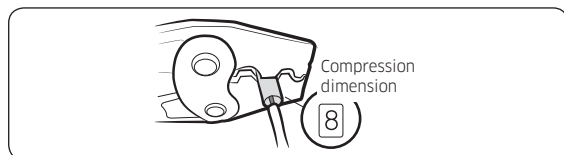


- After compressing it, pull both sides of the wire to make sure it is firmly pressed.

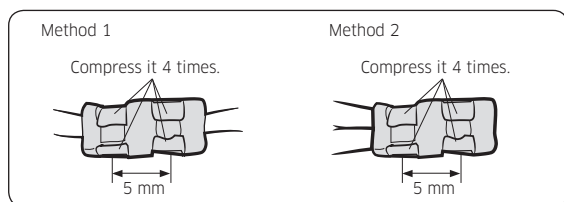

- 5 Wrap it with the insulation tape twice or more and position your contraction tube in the middle of the insulation tape. A total of three or more layers of insulation is required.

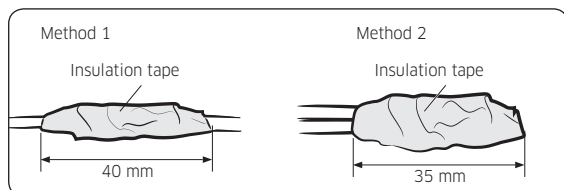


- 6 Apply heat to the contraction tube to contract it.



- 7 After tube contraction work is completed, wrap it with the insulation tape to finish.


## CAUTION

- Make sure that the connection parts are not exposed to outside.
- Be sure to use insulation tape and a contraction tube made of approved reinforced insulating materials that have the same level of withstand voltage with the power cable. (Comply with the local regulations on extensions.)



## WARNING

- In case of extending the electric wire, please DO NOT use a round-shaped Pressing socket.
  - Incomplete wire connections can cause electric shock or a fire.

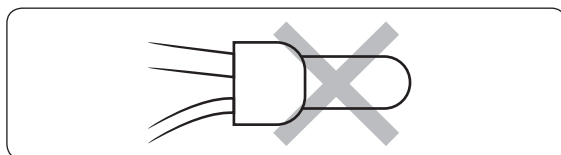


## Step 14 Setting the indoor unit addresses and the installation options

You cannot set both of the indoor unit addresses and the installation options in a batch: set both of them respectively.

### Common steps for setting the addresses and options

AR-KH00E remote control (for 360 cassette only)

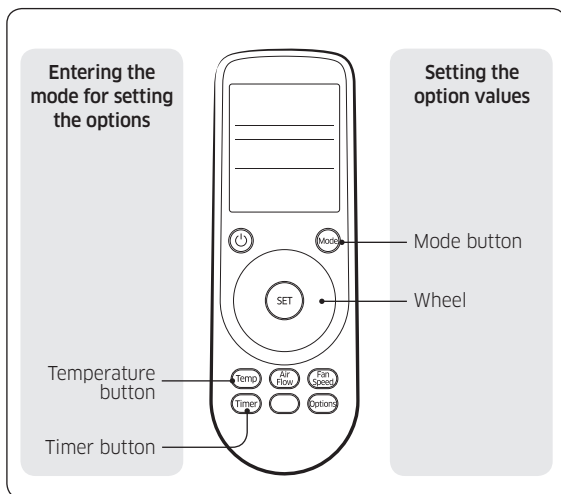


## NOTE

- The remote control display may vary depending on the model.

## 1 Enter the mode for setting the options:

- Remove the batteries from the remote control.
- While holding down the **Temp** (Temp) and **Timer** (Timer) buttons simultaneously, insert the batteries into the remote control.
- Make sure that you are entered to the mode for setting the options:

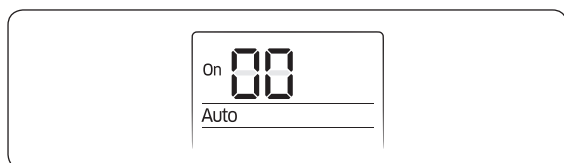

## 2 Set the option values.

### ⚠ CAUTION

- The total number of available options are 24: SEG1 to SEG24.
- Because SEG1, SEG7, SEG13, and SEG19 are the page options used by the previous remote control models, the modes to set values for these options are skipped automatically.

- Set a 2-digit value for each option pair in the following order: SEG2 and SEG3 → SEG4 and SEG5 → SEG6 and SEG8 → SEG9 and SEG10 → SEG11 and SEG12 → SEG14 and SEG15 → SEG16 and SEG17 → SEG18 and SEG20 → SEG21 and SEG22 → SEG23 and SEG24













| SEG1  | SEG2  | SEG3  | SEG4  | SEG5  | SEG6  |
|-------|-------|-------|-------|-------|-------|
| 0     | X     | X     | X     | X     | X     |
| SEG7  | SEG8  | SEG9  | SEG10 | SEG11 | SEG12 |
| 1     | X     | X     | X     | X     | X     |
| SEG13 | SEG14 | SEG15 | SEG16 | SEG17 | SEG18 |
| 2     | X     | X     | X     | X     | X     |
| SEG19 | SEG20 | SEG21 | SEG22 | SEG23 | SEG24 |
| 3     | X     | X     | X     | X     | X     |












| On (SEG1 to SEG12) | Off (SEG13 to SEG24) |
|--------------------|----------------------|
|                    |                      |

Take the steps presented in the following table:






| Steps                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Remote control display |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|
| <b>1 Set the SEG2 and SEG3 values:</b> <ol style="list-style-type: none"> <li>Set the SEG2 value by rotating the Wheel counterclockwise until the value you want to set appears on the remote control display.</li> <li>Set the SEG3 value by rotating the Wheel clockwise until the value you want to set appears on the remote control display.</li> </ol> <p>When you rotate the Wheel, values appear in the following order: 0 → 1 → ... → E → F</p> | <br>                   |
| <b>2 Press the <b>Mode</b> (Mode) button. <b>Cool</b> and <b>On</b> appear on the remote control display.</b>                                                                                                                                                                                                                                                                                                                                            |                        |

# Installation Procedure

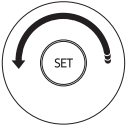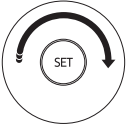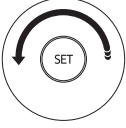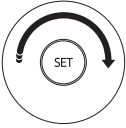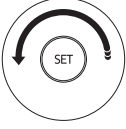

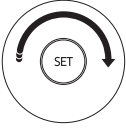

| Steps                                                                                                                                                                                |                                                                                     | Remote control display                                                                         |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| <b>3</b> Set the SEG4 and SEG5 values:                                                                                                                                               |                                                                                     |                                                                                                |
| <b>a</b> Set the SEG4 value by rotating the Wheel counterclockwise until the value you want to set appears on the remote control display.                                            |    | <br>SEG4    |
| <b>b</b> Set the SEG5 value by rotating the Wheel clockwise until the value you want to set appears on the remote control display.                                                   |    | <br>SEG5    |
| When you rotate the Wheel, values appear in the following order: 0 → 1 → ... E → F                                                                                                   |                                                                                     |                                                                                                |
| <b>4</b> Press the  (Mode) button. <b>Dry</b> and <b>On</b> appear on the remote control display.   |                                                                                     |             |
| <b>5</b> Set the SEG6 and SEG8 values:                                                                                                                                               |                                                                                     |                                                                                                |
| <b>a</b> Set the SEG6 value by rotating the Wheel counterclockwise until the value you want to set appears on the remote control display.                                            |   | <br>SEG6   |
| <b>b</b> Set the SEG8 value by rotating the Wheel clockwise until the value you want to set appears on the remote control display.                                                   |  | <br>SEG8  |
| When you rotate the Wheel, values appear in the following order: 0 → 1 → ... E → F                                                                                                   |                                                                                     |                                                                                                |
| <b>6</b> Press the  (Mode) button. <b>Fan</b> and <b>On</b> appear on the remote control display. |                                                                                     |           |
| <b>7</b> Set the SEG9 and SEG10 values:                                                                                                                                              |                                                                                     |                                                                                                |
| <b>a</b> Set the SEG9 value by rotating the Wheel counterclockwise until the value you want to set appears on the remote control display.                                            |  | <br>SEG9  |
| <b>b</b> Set the SEG10 value by rotating the Wheel clockwise until the value you want to set appears on the remote control display.                                                  |  | <br>SEG10 |
| When you rotate the Wheel, values appear in the following order: 0 → 1 → ... E → F                                                                                                   |                                                                                     |                                                                                                |
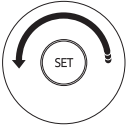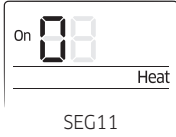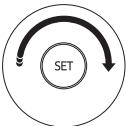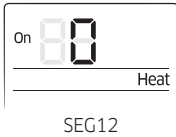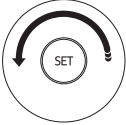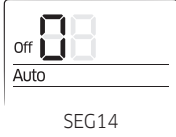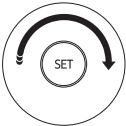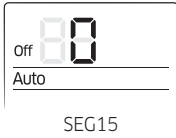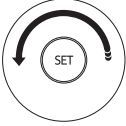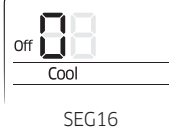
| Steps                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Remote control display                                                                                                                                                                                                                                                                                                                              |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>8</b> Press the  (Mode) button. <b>Heat</b> and <b>On</b> appear on the remote control display.                                                                                                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                                  |
| <b>9</b> Set the SEG11 and SEG12 values: <ul style="list-style-type: none"> <li> <b>a</b> Set the SEG11 value by rotating the Wheel counterclockwise until the value you want to set appears on the remote control display. </li> <li> <b>b</b> Set the SEG12 value by rotating the Wheel clockwise until the value you want to set appears on the remote control display. </li> </ul> <p>When you rotate the Wheel, values appear in the following order: 0 → 1 → ... → E → F</p>  |             |
| <b>10</b> Press the  (Mode) button. <b>Auto</b> and <b>Off</b> appear on the remote control display.                                                                                                                                                                                                                                                                                               |                                                                                                                                                                                                                                                                 |
| <b>11</b> Set the SEG14 and SEG15 values: <ul style="list-style-type: none"> <li> <b>a</b> Set the SEG14 value by rotating the Wheel counterclockwise until the value you want to set appears on the remote control display. </li> <li> <b>b</b> Set the SEG15 value by rotating the Wheel clockwise until the value you want to set appears on the remote control display. </li> </ul> <p>When you rotate the Wheel, values appear in the following order: 0 → 1 → ... → E → F</p> |     |
| <b>12</b> Press the  (Mode) button. <b>Cool</b> and <b>Off</b> appear on the remote control display.                                                                                                                                                                                                                                                                                             |                                                                                                                                                                                                                                                                |
| <b>13</b> Set the SEG16 and SEG17 values: <ul style="list-style-type: none"> <li> <b>a</b> Set the SEG16 value by rotating the Wheel counterclockwise until the value you want to set appears on the remote control display. </li> </ul>                                                                                                                                                                                                                                            |                                                                                                                                                                             |


# Installation Procedure

| Steps                                                                                                                                      |  | Remote control display                                                                         |
|--------------------------------------------------------------------------------------------------------------------------------------------|--|------------------------------------------------------------------------------------------------|
| <b>b</b> Set the SEG17 value by rotating the Wheel clockwise until the value you want to set appears on the remote control display.        |  | <br>SEG17   |
| When you rotate the Wheel, values appear in the following order: 0 → 1 → ... E → F                                                         |  |                                                                                                |
| <b>14</b> Press the (Mode) button. <b>Dry</b> and <b>Off</b> appear on the remote control display.                                         |  |             |
| <b>15</b> Set the SEG18 and SEG20 values:                                                                                                  |  |                                                                                                |
| <b>a</b> Set the SEG18 value by rotating the Wheel counterclockwise until the value you want to set appears on the remote control display. |  | <br>SEG18   |
| <b>b</b> Set the SEG20 value by rotating the Wheel clockwise until the value you want to set appears on the remote control display.        |  | <br>SEG20  |
| When you rotate the Wheel, values appear in the following order: 0 → 1 → ... E → F                                                         |  |                                                                                                |
| <b>16</b> Press the (Mode) button. <b>Fan</b> and <b>Off</b> appear on the remote control display.                                         |  |           |
| <b>17</b> Set the SEG21 and SEG22 values:                                                                                                  |  |                                                                                                |
| <b>a</b> Set the SEG21 value by rotating the Wheel counterclockwise until the value you want to set appears on the remote control display. |  | <br>SEG21 |
| <b>b</b> Set the SEG22 value by rotating the Wheel clockwise until the value you want to set appears on the remote control display.        |  | <br>SEG22 |
| When you rotate the Wheel, values appear in the following order: 0 → 1 → ... E → F                                                         |  |                                                                                                |

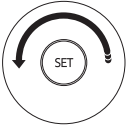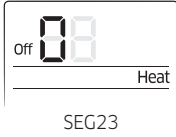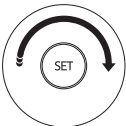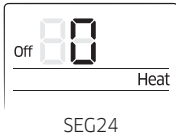

| Steps                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Remote control display                                                              |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <b>18</b> Press the  (Mode) button. <b>Heat</b> and <b>Off</b> appear on the remote control display.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |  |
| <b>19</b> Set the SEG23 and SEG24 values: <div style="display: flex; justify-content: space-around; align-items: flex-start; margin-top: 10px;"> <div style="width: 45%;"> <p><b>a</b> Set the SEG23 value by rotating the Wheel counterclockwise until the value you want to set appears on the remote control display.</p>  </div> <div style="width: 45%;">  </div> </div> <div style="display: flex; justify-content: space-around; align-items: flex-start; margin-top: 10px;"> <div style="width: 45%;"> <p><b>b</b> Set the SEG24 value by rotating the Wheel clockwise until the value you want to set appears on the remote control display.</p>  </div> <div style="width: 45%;">  </div> </div> <p style="margin-top: 10px;">When you rotate the Wheel, values appear in the following order: 0 → 1 → ... → E → F</p> |                                                                                     |

- 3** Check whether the option values that you have set are correct by pressing the  (Mode) button repeatedly

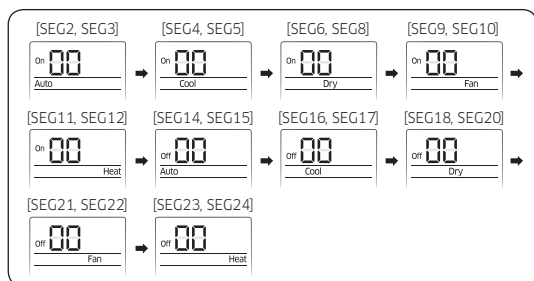


- 4** Save the option values into the indoor unit:
- Point the remote control to the remote control sensor on the indoor unit and then press the  (Power) button on the remote control twice. Make sure that this command is received by the indoor unit. When it is successfully received, you can hear a short sound from the indoor unit. If the command is not received, press the  (Power) button again.

- 5** Check whether the air conditioner operates in accordance with the option values you have set:

- a** Reset the indoor unit by disconnecting and then reconnecting the power cable of the indoor unit or by pressing the RESET button on the outdoor unit.
- b** Remove the batteries from the remote control, insert them again, and then press the  (Power) button on the remote control.


# Installation Procedure

MR-EC00 and MR-EH00 remote controls

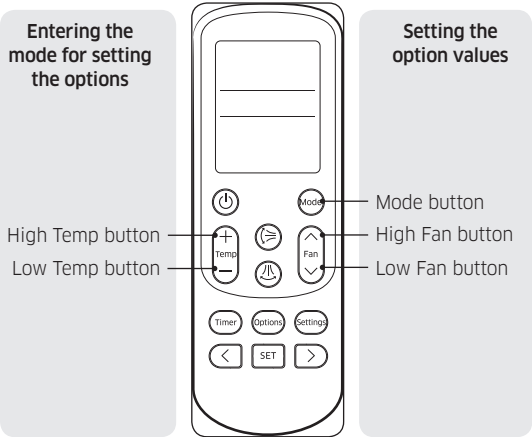

## NOTE

- The remote control display and buttons may vary depending on the model.
- Enter the mode for setting the options:
    - Remove the batteries from the remote control, and then insert them again.
    - While holding down the  (High Temp) and  (Low Temp) buttons simultaneously, insert the batteries into the remote control.
    - Make sure that you are entered to the mode for setting the options:

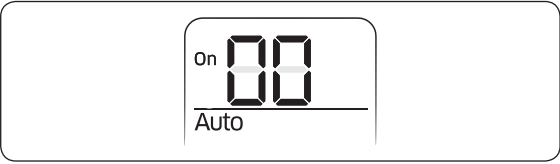

- Set the option values.









## CAUTION

- The total number of available options are 24: SEG1 to SEG24.
- Because SEG1, SEG7, SEG13, and SEG19 are the page options used by the previous remote control models, the modes to set values for these options are skipped automatically.
- Set a 2-digit value for each option pair in the following order: SEG2 and SEG3 → SEG4 and SEG5 → SEG6 and SEG8 → SEG9 and SEG10 → SEG11 and SEG12 → SEG14 and SEG15 → SEG16 and SEG17 → SEG18 and SEG20 → SEG21 and SEG22 → SEG23 and SEG24






| SEG1  | SEG2  | SEG3  | SEG4  | SEG5  | SEG6  |
|-------|-------|-------|-------|-------|-------|
| 0     | X     | X     | X     | X     | X     |
| SEG7  | SEG8  | SEG9  | SEG10 | SEG11 | SEG12 |
| 1     | X     | X     | X     | X     | X     |
| SEG13 | SEG14 | SEG15 | SEG16 | SEG17 | SEG18 |
| 2     | X     | X     | X     | X     | X     |
| SEG19 | SEG20 | SEG21 | SEG22 | SEG23 | SEG24 |
| 3     | X     | X     | X     | X     | X     |






| On (SEG1 to SEG12)                                                                                                                                                                | Off (SEG13 to SEG24)                                                                                                                                                              |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <br>Auto |  <br>Auto |

Take the steps presented in the following table:

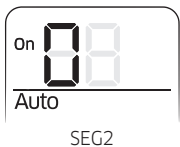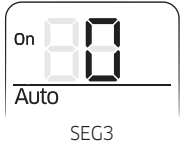
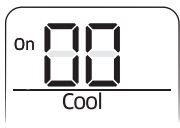
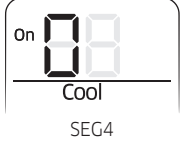
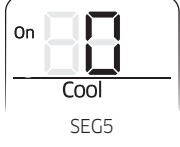
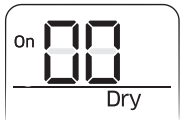
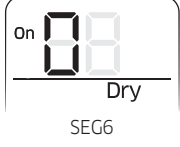
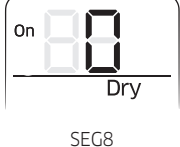
| Steps                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Remote control display                                                                                                                                                                              |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>1</b> Set the SEG2 and SEG3 values:</p> <p><b>a</b> Set the SEG2 value by pressing the  (Low Fan) button repeatedly until the value you want to set appears on the remote control display.</p> <p><b>b</b> Set the SEG3 value by pressing the  (High Fan) button repeatedly until the value you want to set appears on the remote control display.</p> <p>When you press the  (Low Fan) or  (High Fan) button, values appear in the following order:  →  → ... →  → </p>                |  <p>SEG2</p>  <p>SEG3</p>     |
| <p><b>2</b> Press the  (Mode) button. <b>Cool</b> and <b>On</b> appear on the remote control display.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                                                                                                  |
| <p><b>3</b> Set the SEG4 and SEG5 values:</p> <p><b>a</b> Set the SEG4 value by pressing the  (Low Fan) button repeatedly until the value you want to set appears on the remote control display.</p> <p><b>b</b> Set the SEG5 value by pressing the  (High Fan) button repeatedly until the value you want to set appears on the remote control display.</p> <p>When you press the  (Low Fan) or  (High Fan) button, values appear in the following order:  →  → ... →  → </p> |  <p>SEG4</p>  <p>SEG5</p>  |
| <p><b>4</b> Press the  (Mode) button. <b>Dry</b> and <b>On</b> appear on the remote control display.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |                                                                                                                |
| <p><b>5</b> Set the SEG6 and SEG8 values:</p> <p><b>a</b> Set the SEG6 value by pressing the  (Low Fan) button repeatedly until the value you want to set appears on the remote control display.</p> <p><b>b</b> Set the SEG8 value by pressing the  (High Fan) button repeatedly until the value you want to set appears on the remote control display.</p> <p><b>c</b></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |  <p>SEG6</p>  <p>SEG8</p> |

# Installation Procedure

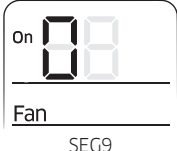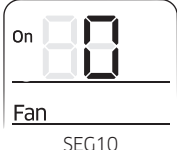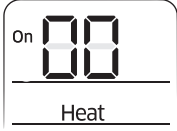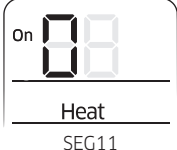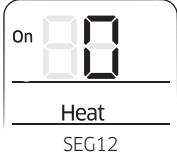
| Steps                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Remote control display                                                                                                                                                         |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| When you press the  (Low Fan) or  (High Fan) button, values appear in the following order:  →  → ...  →                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                                                                                                                                                                                |
| 6 Press the  (Mode) button. <b>Fan</b> and <b>On</b> appear on the remote control display.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                                                                             |
| 7 Set the SEG9 and SEG10 values:<br><br>a Set the SEG9 value by pressing the  (Low Fan) button repeatedly until the value you want to set appears on the remote control display.<br><br>b Set the SEG10 value by pressing the  (High Fan) button repeatedly until the value you want to set appears on the remote control display.<br><br>When you press the  (Low Fan) or  (High Fan) button, values appear in the following order:  →  → ...  →          | <br>     |
| 8 Press the  (Mode) button. <b>Heat</b> and <b>On</b> appear on the remote control display.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                                                                                           |
| 9 Set the SEG11 and SEG12 values:<br><br>a Set the SEG11 value by pressing the  (Low Fan) button repeatedly until the value you want to set appears on the remote control display.<br><br>b Set the SEG12 value by pressing the  (High Fan) button repeatedly until the value you want to set appears on the remote control display.<br><br>When you press the  (Low Fan) or  (High Fan) button, values appear in the following order:  →  → ...  →  | <br> |
| 10 Press the  (Mode) button. <b>Auto</b> and <b>Off</b> appear on the remote control display.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                                                           |

| Steps                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Remote control display                                                                                                                                                                               |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>11</b> Set the SEG14 and SEG15 values:</p> <p><b>a</b> Set the SEG14 value by pressing the  (Low Fan) button repeatedly until the value you want to set appears on the remote control display.</p> <p><b>b</b> Set the SEG15 value by pressing the  (High Fan) button repeatedly until the value you want to set appears on the remote control display.</p> <p>When you press the  (Low Fan) or  (High Fan) button, values appear in the following order:  →  → ... →  → </p>                |  <p>SEG14</p>  <p>SEG15</p>    |
| <p><b>12</b> Press the  (Mode) button. <b>Cool</b> and <b>Off</b> appear on the remote control display.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                                                                                                                   |
| <p><b>13</b> Set the SEG16 and SEG17 values:</p> <p><b>a</b> Set the SEG16 value by pressing the  (Low Fan) button repeatedly until the value you want to set appears on the remote control display.</p> <p><b>b</b> Set the SEG17 value by pressing the  (High Fan) button repeatedly until the value you want to set appears on the remote control display.</p> <p>When you press the  (Low Fan) or  (High Fan) button, values appear in the following order:  →  → ... →  → </p> |  <p>SEG16</p>  <p>SEG17</p> |
| <p><b>14</b> Press the  (Mode) button. <b>Dry</b> and <b>Off</b> appear on the remote control display.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                                                                                                 |
| <p><b>15</b> Set the SEG18 and SEG20 values:</p> <p><b>a</b> Set the SEG18 value by pressing the  (Low Fan) button repeatedly until the value you want to set appears on the remote control display.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |  <p>SEG18</p>                                                                                                   |

# Installation Procedure
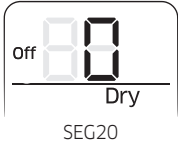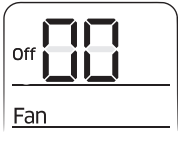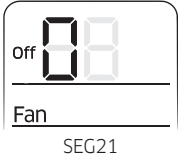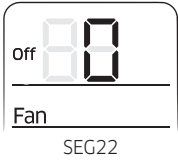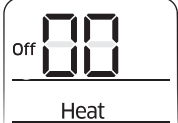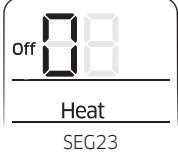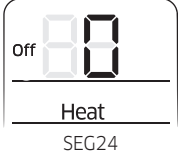
| Steps                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Remote control display                                                                                                                                                         |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>b</b> Set the SEG20 value by pressing the  (High Fan) button repeatedly until the value you want to set appears on the remote control display.</p> <p>When you press the  (Low Fan) or  (High Fan) button, values appear in the following order:  →  → ... →  → </p>                                                                                                                                                                                                                                                                                                           |                                                                                             |
| <p><b>16</b> Press the  (Mode) button. <b>Fan</b> and <b>Off</b> appear on the remote control display.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |                                                                                             |
| <p><b>17</b> Set the SEG21 and SEG22 values:</p> <p><b>a</b> Set the SEG21 value by pressing the  (Low Fan) button repeatedly until the value you want to set appears on the remote control display.</p> <p><b>b</b> Set the SEG22 value by pressing the  (High Fan) button repeatedly until the value you want to set appears on the remote control display.</p> <p>When you press the  (Low Fan) or  (High Fan) button, values appear in the following order:  →  → ... →  → </p>    | <br>    |
| <p><b>18</b> Press the  (Mode) button. <b>Heat</b> and <b>Off</b> appear on the remote control display.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                                                                           |
| <p><b>19</b> Set the SEG23 and SEG24 values:</p> <p><b>a</b> Set the SEG23 value by pressing the  (Low Fan) button repeatedly until the value you want to set appears on the remote control display.</p> <p><b>b</b> Set the SEG24 value by pressing the  (High Fan) button repeatedly until the value you want to set appears on the remote control display.</p> <p>When you press the  (Low Fan) or  (High Fan) button, values appear in the following order:  →  → ... →  → </p> | <br> |

- 3 Check whether the option values that you have set are correct by pressing the  (Mode) button repeatedly

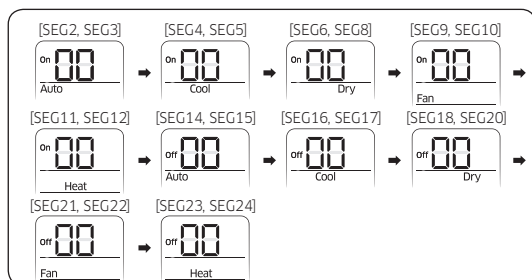


- 4 Save the option values into the indoor unit:  
Point the remote control to the remote control sensor on the indoor unit and then press the  (Power) button on the remote control twice. Make sure that this command is received by the indoor unit. When it is successfully received, you can hear a short sound from the indoor unit. If the command is not received, press the  (Power) button again.
- 5 Check whether the air conditioner operates in accordance with the option values you have set:
- Reset the indoor unit by disconnecting and then reconnecting the power cable of the indoor unit or by pressing the RESET button on the outdoor unit.
  - Remove the batteries from the remote control, insert them again, and then press the  (Power) button on the remote control.

**Option No. for an indoor unit address:**  
**0AXXXX-1XXXXX-2XXXXX-3XXXXX**

### Setting the indoor unit addresses (main and RMC)

- Make sure that the power is supplied to the indoor unit.
  - If the indoor unit is not plugged in, it must include a power supply.
- Make sure that the panel or display is connected to the indoor unit so that it can receive options.

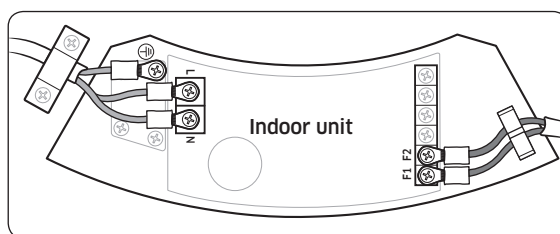

- Set an address (main or RMC addresses) for each indoor unit using the remote control, according to your air conditioning system plan.
  - The indoor unit addresses (main and RMC addresses) are set to 0A0000-100000-200000-300000 by default.

| Option                 | SEG1       |         | SEG2       |         | SEG3                 |                           | SEG4                                |          | SEG5                               |                | SEG6                               |                |
|------------------------|------------|---------|------------|---------|----------------------|---------------------------|-------------------------------------|----------|------------------------------------|----------------|------------------------------------|----------------|
| Function               | Page       |         | Mode       |         | Setting main address |                           | 100-digit of an indoor unit address |          | 10-digit of an indoor unit address |                | The single digit of an indoor unit |                |
| Indication and details | Indication | Details | Indication | Details | Indication           | Details                   | Indication                          | Details  | Indication                         | Details        | Indication                         | Details        |
|                        | 0          |         | A          |         | 0                    | No main address           | 0 to 9                              | 10-digit | 0 to 9                             | A single digit | 0 to 3                             | A single digit |
|                        |            |         |            |         | 1                    | Main address setting mode |                                     |          |                                    |                |                                    |                |

# Installation Procedure

| Option                 | SEG7       |         | SEG8 | SEG9                |                          | SEG10 | SEG11               |         | SEG12         |         |
|------------------------|------------|---------|------|---------------------|--------------------------|-------|---------------------|---------|---------------|---------|
| Function               | Page       |         | -    | Setting RMC address |                          | -     | Group channel (x16) |         | Group address |         |
| Indication and details | Indication | Details | -    | Indication          | Details                  | -     | Indication          | Details | Indication    | Details |
|                        | 1          |         |      | 0                   | No RMC address           |       | RMC1                | 0 to F  | RMC2          | 0 to F  |
|                        |            |         |      | 1                   | RMC address setting mode |       |                     |         |               |         |

## ⚠ CAUTION


- If you enter A to F to the SEG5 or SEG6, the indoor unit main address is not changed.
- If you enter 0 to the SEG 3, the indoor unit maintains the previous main address although you enter the option value for the SEG5 or SEG 6.
- If you enter 0 to the SEG 9, the indoor unit maintains previous RMC address although you enter the option value for the SEG11 or SEG12.
- You cannot set the SEG11 or SEG12 to F value at the same time.

## Setting the indoor unit installation option (suitable for the condition of each installation location)

- 1 Make sure that the power is supplied to the indoor unit.
  - If the indoor unit is not plugged in, it must include a power supply.
- 2 Make sure that the panel or display is connected to the indoor unit so that it can receive options

- 3 Set an address for each indoor unit using the remote control, according to your air conditioning system plan.

- The indoor unit addresses are set to 020010-100000-200000-300000 by default.
- The SEG20 option, Individual control with remote control, allows you to control multiple indoor units individually by using the remote control.

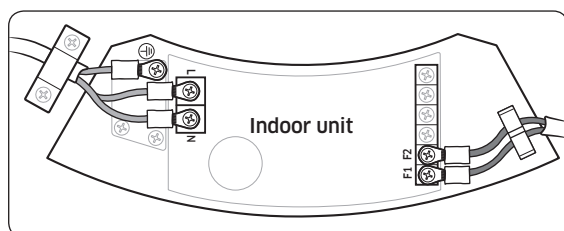



## Installation options for the 02 series

| SEG1  | SEG2                                   | SEG3                                                                              | SEG4                                                                                 | SEG5                        | SEG6                        |
|-------|----------------------------------------|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|-----------------------------|-----------------------------|
| 0     | 2                                      | -                                                                                 | Use of external temperature sensor / Minimizing fan operation when thermostat is off | Use of central control      | Compensation of the fan RPM |
| SEG7  | SEG8                                   | SEG9                                                                              | SEG10                                                                                | SEG11                       | SEG12                       |
| 1     | Use of drain pump                      | Use of hot water heater                                                           | -                                                                                    | EEV step when heating stops | -                           |
| SEG13 | SEG14                                  | SEG15                                                                             | SEG16                                                                                | SEG17                       | SEG18                       |
| 2     | Use of external control                | Setting the output of external control / External heater On or Off signal         | -                                                                                    | Buzzer control              | Maximum filter usage time   |
| SEG19 | SEG20                                  | SEG21                                                                             | SEG22                                                                                | SEG23                       | SEG24                       |
| 3     | Individual control with remote control | Heating setting compensation offset / Removing condensated water in the Heat mode | EEV step of stopped unit during the oil return or the defrost mode                   | Motion detection sensor     | Cycle time of Swing         |

- Even if you set the Use of drain pump (SEG8) option to 0, it is automatically set to 2 (the drain pump is used with 3 minute delay).
- If you set the Maximum filter usage time (SEG18) option to a value other than 2 and 6, it is automatically set to 2 (1000 hours).
- If you set an option to a value that is out of range specified above, the option is automatically set to 0 by default.
- The SEG5 option (Use of central control) is set to 1 (Use) by default. Therefore, you don't need to set the SEG5 option additionally. Note that even if the central control system is not connected, no errors occur. If you want a specific indoor unit not to be controlled by the central control system, set the SEG option of that indoor unit to 0 (Disuse).
- The external output of SEG15 is generated via MIM-B14 connection. (Refer to the manual of MIM-B14.)
- If you set the Individual control with remote control (SEG20) option to a value other than 0 to 4, it is automatically set to 0 (Indoor 1).

# Installation Procedure

Installation options for the O2 series (detailed)

**Option No. for an indoor unit address: 02XXXX-1XXXXX-2XXXXX-3XXXXX**

| Option                    | SEG1       |         | SEG2                                     |                                                       | SEG3                       |         | SEG4                                                                                       |         |        | SEG5                           |                                                 | SEG6                           |                                     |
|---------------------------|------------|---------|------------------------------------------|-------------------------------------------------------|----------------------------|---------|--------------------------------------------------------------------------------------------|---------|--------|--------------------------------|-------------------------------------------------|--------------------------------|-------------------------------------|
| Function                  | Page       |         | Mode                                     |                                                       | -                          |         | Use of external temperature sensor /<br>Minimizing fan operation when thermostat<br>is off |         |        | Use of central control         |                                                 | Compensation of the<br>fan RPM |                                     |
| Indication and<br>details | Indication | Details | Indication                               | Details                                               | -                          |         | Indication                                                                                 | Details |        | Indication                     | Details                                         | Indication                     | Details                             |
|                           | 0          | 2       | Use of external<br>temperature<br>sensor | Minimizing fan<br>operation when<br>thermostat is off |                            |         |                                                                                            | 0       | Disuse |                                |                                                 |                                |                                     |
|                           |            |         | 0                                        | Disuse                                                |                            |         | (Cooling, Heating)<br>Disuse                                                               |         |        |                                |                                                 |                                |                                     |
|                           |            |         | 1                                        | Use                                                   |                            |         | (Cooling, Heating)<br>Disuse                                                               | 1       | Use    | 1                              | High-ceiling<br>mode (recessed<br>installation) |                                |                                     |
|                           |            |         | 2                                        | Disuse                                                |                            |         | (Heating) Use (*2)                                                                         |         |        |                                |                                                 | 4                              | Disuse<br>(exposed<br>installation) |
|                           |            |         | 3                                        | Use                                                   |                            |         | (Heating) Use (*2)                                                                         |         |        | 5                              | High-ceiling<br>mode (exposed<br>installation)  |                                |                                     |
|                           |            |         | 4                                        | Disuse                                                |                            |         | (Cooling) Use                                                                              |         |        |                                |                                                 |                                |                                     |
|                           |            |         | 5                                        | Use                                                   |                            |         | (Cooling) Use                                                                              |         |        |                                |                                                 |                                |                                     |
|                           |            |         | 6                                        | Disuse                                                |                            |         | (Cooling, Heating)<br>Use (*2)                                                             |         |        |                                |                                                 |                                |                                     |
|                           | 7          | Use     | (Cooling, Heating)<br>Use (*2)           |                                                       |                            |         |                                                                                            |         |        |                                |                                                 |                                |                                     |
| Option                    | SEG7       |         | SEG8                                     |                                                       | SEG9                       |         | SEG10                                                                                      |         |        | SEG11                          |                                                 | SEG12                          |                                     |
| Function                  | Page       |         | Use of drain pump                        |                                                       | Use of hot water<br>heater |         | -                                                                                          |         |        | EEV step when<br>heating stops |                                                 | -                              |                                     |
| Indication and<br>detail  | Indication | Details | Indication                               | Details                                               | Indication                 | Details | -                                                                                          |         |        | Indication                     | Details                                         | -                              |                                     |
|                           | 1          | 0       | Disuse                                   | 0                                                     | Disuse                     | 0       |                                                                                            |         |        | Default                        |                                                 |                                |                                     |
|                           |            | 1       | Use                                      | 1                                                     | Use (*3)                   | 1       |                                                                                            |         |        | Noise<br>decreasing<br>setting |                                                 |                                |                                     |
|                           |            | 2       | Use with<br>3 minute<br>delay            | 2                                                     | -                          |         |                                                                                            |         |        |                                |                                                 |                                |                                     |
|                           |            |         |                                          | 3                                                     | Use (*3)                   |         |                                                                                            |         |        |                                |                                                 |                                |                                     |

| Option                 | SEG13      |         | SEG14                                  |                   | SEG15                                                                             |                                        |                                             | SEG16                                                              |                                                | SEG17                               |                                    | SEG18                     |                      |
|------------------------|------------|---------|----------------------------------------|-------------------|-----------------------------------------------------------------------------------|----------------------------------------|---------------------------------------------|--------------------------------------------------------------------|------------------------------------------------|-------------------------------------|------------------------------------|---------------------------|----------------------|
| Function               | Page       |         | Use of external control                |                   | Setting the output of external control / External heater On or Off signal         |                                        |                                             | S-Plasma ion                                                       |                                                | Buzzer control                      |                                    | Maximum filter usage time |                      |
| Indication and details | Indication | Details | Indication                             | Details           | Indication                                                                        | Details                                |                                             | Indication                                                         | Details                                        | Indication                          | Details                            | Indication                | Details              |
|                        |            |         |                                        |                   |                                                                                   | Setting the output of external control | External heater On or Off signal            |                                                                    |                                                |                                     |                                    |                           |                      |
|                        | 2          |         | 0                                      | Disuse            | 0                                                                                 | Thermo On                              | -                                           | 0                                                                  | Disuse                                         | 0                                   | Use of buzzer                      | 2                         | 1000 hours           |
|                        |            |         | 1                                      | ON or OFF control | 1                                                                                 | Operation On                           | -                                           | 1                                                                  | Use                                            | 1                                   | Disuse of buzzer                   | 6                         | 2000 hours           |
|                        |            |         | 2                                      | OFF control       | 2                                                                                 | -                                      | Use (*4)                                    |                                                                    |                                                |                                     |                                    |                           |                      |
| 3                      |            |         | Window ON or OFF control               | 3                 | -                                                                                 | Use (*4)                               |                                             |                                                                    |                                                |                                     |                                    |                           |                      |
| Option                 | SEG19      |         | SEG20                                  |                   | SEG21                                                                             |                                        |                                             | SEG22                                                              |                                                | SEG23                               |                                    | SEG24                     |                      |
| Function               | Page       |         | Individual control with remote control |                   | Heating setting compensation offset / Removing condensated water in the Heat mode |                                        |                                             | EEV step of stopped unit during the oil return or the defrost mode |                                                | Motion detection sensor             |                                    | Cycle time of Swing       |                      |
| Indication and details | Indication | Details | Indication                             | Details           | Indication                                                                        | Details                                |                                             | Indication                                                         | Details                                        | Indication                          | Details                            | Indication                | Details              |
|                        |            |         |                                        |                   |                                                                                   | Heating setting compensation offset    | Removing condensated water in the Heat mode |                                                                    |                                                |                                     |                                    |                           |                      |
|                        | 3          |         | 0 or 1                                 | Indoor 1          | 0                                                                                 | Default (*5)                           | Disuse                                      | 0                                                                  | Default                                        | 0                                   | Disuse                             | 0                         | 34 seconds (default) |
|                        |            |         |                                        |                   | 1                                                                                 | 2 °C                                   | Disuse                                      | 1                                                                  | Oil return or Noise decreasing in defrost mode | 1                                   | Turn out in 30 min. without motion | 1                         | 30 seconds           |
|                        |            |         | 2                                      | Indoor 2          | 2                                                                                 | 5 °C                                   | Disuse                                      |                                                                    |                                                | 2                                   | Turn out in 60 min. without motion | 2                         | 38 seconds           |
| 3                      |            |         | Indoor 3                               | 3                 | Default (*5)                                                                      | Use (*6)                               | 3                                           |                                                                    |                                                | Turn out in 120 min. without motion |                                    |                           |                      |

# Installation Procedure

|                        |   |   |          |   |      |          |   |                                                |   |                                                               |   |            |
|------------------------|---|---|----------|---|------|----------|---|------------------------------------------------|---|---------------------------------------------------------------|---|------------|
| Indication and details | 3 | 4 | Indoor 4 | 4 | 2 °C | Use (*6) | 1 | Oil return or Noise decreasing in defrost mode | 4 | Turn out in 180 min. without motion                           | 2 | 38 seconds |
|                        |   |   |          | 5 | 5 °C | Use (*6) |   |                                                | 5 | Turn out in 30 min. without motion or advanced function (*1)  |   |            |
|                        |   |   |          |   |      |          |   |                                                | 6 | Turn out in 60 min. without motion or advanced function (*1)  |   |            |
|                        |   |   |          |   |      |          |   |                                                | 7 | Turn out in 120 min. without motion or advanced function (*1) |   |            |
|                        |   |   |          |   |      |          |   |                                                | 8 | Turn out in 180 min. without motion or advanced function (*1) |   |            |

(\*1) Advanced function: Either controlling the cooling or heating current or power saving with motion detection.

(\*2) Minimizing fan operation when thermostat is off: The fan operates for 20 seconds at an interval of 5 minutes in the Heat mode.

(\*3) 1: The fan is turned on continually when the hot water heater is turned on, 3: The fan is turned off when the hot water heater is turned on with cooling only indoor unit.

(Cooling only indoor unit: To use this option, install the Mode Select switch (MCM-C200) on the outdoor unit and fix it to the Cool mode.)

(\*4) When the following 2 or 3 is used as external heater On or Off signal, the signal for monitoring external contact control will not be output.

2: The fan is turned on continually when the external heater is turned on,

3: The fan is turned off when the external heater is turned on with cooling only indoor unit

(Cooling only indoor unit: To use this option, install the Mode Select switch (MCM-C200) on the outdoor unit and fix it to the Cool mode.)

## NOTE

- If the fan is set to off for cooling only indoor unit by setting the SEG9=3 or SEG15=3, you need to use an external sensor or wired remote control sensor to detect indoor temperature exactly.

(\*5) Default setting value: 5 °C

(\*6) If the air conditioner operates in the Heat mode immediately after finishing the cooling operation, the condensed water in the drain pan becomes water steam by the heat of the indoor unit heat exchanger. Since the water steam might be condensed on the indoor unit, which may fall into a living space, use this function to remove the water steam out of the indoor unit by operating the fan (for maximum 20 minutes) although the indoor unit is turned off after the Cool mode is turned to the Heat mode.

#### Installation options for the 05 series

| SEG1  | SEG2                                                                    | SEG3                                                             | SEG4                                                                               | SEG5                                                                | SEG6                                                                      |
|-------|-------------------------------------------------------------------------|------------------------------------------------------------------|------------------------------------------------------------------------------------|---------------------------------------------------------------------|---------------------------------------------------------------------------|
| 0     | 5                                                                       | Use of the HR-specific auto changeover function in the Auto mode | (When setting SEG3)<br>Offset for the heating reference temperature                | (When setting SEG3)<br>Offset for the cooling reference temperature | (When setting SEG3)<br>Reference for change from Heat mode to Cool mode   |
| SEG7  | SEG8                                                                    | SEG9                                                             | SEG10                                                                              | SEG11                                                               | SEG12                                                                     |
| 1     | (When setting SEG3)<br>Reference for change from Cool mode to Heat mode | (When setting SEG3)<br>Time required for mode change             | Compensation option for a long pipe and the height difference between indoor units | -                                                                   | -                                                                         |
| SEG13 | SEG14                                                                   | SEG15                                                            | SEG16                                                                              | SEG17                                                               | SEG18                                                                     |
| 2     | -                                                                       | -                                                                | -                                                                                  | -                                                                   | Control variables when the hot water heater or an external heater is used |
| SEG19 | SEG20                                                                   | SEG21                                                            | SEG22                                                                              | SEG23                                                               | SEG24                                                                     |
| 3     | -                                                                       | -                                                                | -                                                                                  | -                                                                   | -                                                                         |

# Installation Procedure

Installation options for the 05 series (detailed)

Option No. : 05XXXX-1XXXXX-2XXXXX-3XXXXX

| Option                 | SEG1       |         | SEG2                                                                    |         | SEG3                                                             |                                                   | SEG4                                                                               |                                                                                                                | SEG5                                                                |         | SEG6                                                                    |         |
|------------------------|------------|---------|-------------------------------------------------------------------------|---------|------------------------------------------------------------------|---------------------------------------------------|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------|---------|-------------------------------------------------------------------------|---------|
| Function               | Page       |         | Mode                                                                    |         | Use of the HR-specific auto changeover function in the Auto mode |                                                   | (When setting SEG3)<br>Offset for the heating reference temperature                |                                                                                                                | (When setting SEG3)<br>Offset for the cooling reference temperature |         | (When setting SEG3)<br>Reference for change from Heat mode to Cool mode |         |
| Indication and details | Indication | Details | Indication                                                              | Details | Indication                                                       | Details                                           | Indication                                                                         | Details                                                                                                        | Indication                                                          | Details | Indication                                                              | Details |
|                        | 0          |         | 5                                                                       |         | 0                                                                | The product options are followed.                 | 0                                                                                  | 0                                                                                                              | 0                                                                   | 0       | 0                                                                       | 1       |
|                        |            |         |                                                                         |         | 1                                                                | The HR-specific auto changeover function is used. | 1                                                                                  | 0.5                                                                                                            | 1                                                                   | 0.5     | 1                                                                       | 1.5     |
|                        |            |         |                                                                         |         |                                                                  |                                                   | 2                                                                                  | 1                                                                                                              | 2                                                                   | 1       | 2                                                                       | 2       |
|                        |            |         |                                                                         |         |                                                                  |                                                   | 3                                                                                  | 1.5                                                                                                            | 3                                                                   | 1.5     | 3                                                                       | 2.5     |
|                        |            |         |                                                                         |         |                                                                  |                                                   | 4                                                                                  | 2                                                                                                              | 4                                                                   | 2       | 4                                                                       | 3       |
|                        |            |         |                                                                         |         |                                                                  |                                                   | 5                                                                                  | 2.5                                                                                                            | 5                                                                   | 2.5     | 5                                                                       | 3.5     |
|                        |            |         |                                                                         |         |                                                                  |                                                   | 6                                                                                  | 3                                                                                                              | 6                                                                   | 3       | 6                                                                       | 4       |
| 7                      | 3.5        | 7       | 3.5                                                                     | 7       | 4.5                                                              |                                                   |                                                                                    |                                                                                                                |                                                                     |         |                                                                         |         |
| Option                 | SEG7       |         | SEG8                                                                    |         | SEG9                                                             |                                                   | SEG10                                                                              |                                                                                                                | SEG11                                                               |         | SEG12                                                                   |         |
| Function               | Page       |         | (When setting SEG3)<br>Reference for change from Cool mode to Heat mode |         | (When setting SEG3)<br>Time required for mode change             |                                                   | Compensation option for a long pipe and the height difference between indoor units |                                                                                                                | -                                                                   |         | -                                                                       |         |
| Indication and details | Indication | Details | Indication                                                              | Details | Indication                                                       | Details                                           | Indication                                                                         | Details                                                                                                        | -                                                                   | -       |                                                                         |         |
|                        | 1          |         | 0                                                                       | 1       | 0                                                                | 5 min.                                            | 0                                                                                  | The default value is used.                                                                                     |                                                                     |         |                                                                         |         |
|                        |            |         | 1                                                                       | 1.5     | 1                                                                | 7 min.                                            | 1                                                                                  | 1)<br>The height difference (*1) is more than 30 m.<br>- or -<br>2)<br>The distance (*2) is longer than 110 m. |                                                                     |         |                                                                         |         |
|                        |            |         | 2                                                                       | 2       | 2                                                                | 9 min.                                            |                                                                                    |                                                                                                                |                                                                     |         |                                                                         |         |
|                        |            |         | 3                                                                       | 2.5     | 3                                                                | 11 min.                                           |                                                                                    |                                                                                                                |                                                                     |         |                                                                         |         |

|                        |                                                                           |                                  |     |   |         |                          |                                                                                                   |   |   |
|------------------------|---------------------------------------------------------------------------|----------------------------------|-----|---|---------|--------------------------|---------------------------------------------------------------------------------------------------|---|---|
| Indication and details | 1                                                                         | 4                                | 3   | 4 | 13 min. | 2                        | 1) The height difference (*1) is 15 to 30 m.<br><br>- or -<br>2) The distance(*2) is 50 to 110 m. | - | - |
|                        |                                                                           | 5                                | 3.5 | 5 | 15 min. |                          |                                                                                                   |   |   |
|                        |                                                                           | 6                                | 4   | 6 | 20 min. |                          |                                                                                                   |   |   |
|                        |                                                                           | 7                                | 4.5 | 7 | 30 min. |                          |                                                                                                   |   |   |
| Option                 | SEG18(*3)                                                                 |                                  |     |   |         |                          |                                                                                                   |   |   |
| Function               | Control variables when the hot water heater or an external heater is used |                                  |     |   |         |                          |                                                                                                   |   |   |
| Indication and details | Indication                                                                | Details                          |     |   |         |                          |                                                                                                   |   |   |
|                        |                                                                           | Offset temperature for heater on |     |   |         | Delay time for heater on |                                                                                                   |   |   |
|                        | 0                                                                         | At the same time with thermo on  |     |   |         | No delay                 |                                                                                                   |   |   |
|                        | 1                                                                         | At the same time with thermo on  |     |   |         | 10 min.                  |                                                                                                   |   |   |
|                        | 2                                                                         | At the same time with thermo on  |     |   |         | 20 min.                  |                                                                                                   |   |   |
|                        | 3                                                                         | 1.5°C                            |     |   |         | No delay                 |                                                                                                   |   |   |
|                        | 4                                                                         | 1.5°C                            |     |   |         | 10 min.                  |                                                                                                   |   |   |
| Indication and details | 5                                                                         | 1.5°C                            |     |   |         | 20 min.                  |                                                                                                   |   |   |
|                        | 6                                                                         | 3.0°C                            |     |   |         | No delay                 |                                                                                                   |   |   |
|                        | 7                                                                         | 3.0°C                            |     |   |         | 10 min.                  |                                                                                                   |   |   |
|                        | 8                                                                         | 3.0°C                            |     |   |         | 20 min.                  |                                                                                                   |   |   |
|                        | 9                                                                         | 4.5°C                            |     |   |         | No delay                 |                                                                                                   |   |   |
|                        | A                                                                         | 4.5°C                            |     |   |         | 10 min.                  |                                                                                                   |   |   |
|                        | B                                                                         | 4.5°C                            |     |   |         | 20 min.                  |                                                                                                   |   |   |
|                        | C                                                                         | 6.0°C                            |     |   |         | No delay                 |                                                                                                   |   |   |
|                        | D                                                                         | 6.0°C                            |     |   |         | 10 min.                  |                                                                                                   |   |   |
|                        | E                                                                         | 6.0°C                            |     |   |         | 20 min.                  |                                                                                                   |   |   |

# Installation Procedure

- (\*1) Height difference: The difference of the height between the target indoor unit and the indoor unit installed at the lowest place. For example, When the target indoor unit is installed 40 m higher than the indoor unit installed at the lowest place, set the option to 1.
- (\*2) Distance: The difference between the pipe length of the target indoor unit from the outdoor unit and the pipe length of the indoor unit installed at the farthest place from the outdoor unit. For example, when the longest pipe length is 100 m and the pipe length of the target indoor unit is 40 m, set the option to 2. (100 - 40 = 60 m)
- (\*3) The heater operation when SEG9 of the O2 series functional options is set to 'the hot water heater is used' or when SEG15 is set to 'an external heater is used.'

Example 1: When SEG9 of the O2 series functional options is set to 1 or when SEG18 of the O5 series functional options is set to 0:

The hot water heater is immediately turned on when the heating thermostat is turned on and is immediately turned off when the heating thermostat is turned off.


Example 2: When SEG15 of the O2 series functional options is set to 2 or when SEG18 of the O5 series functional options is set to A:

If the condition "room temperature  $\leq$  set temperature + f(heating compensation temperature) - 4.5°C" is maintained for 10 minutes, the external heater is turned on.

If the condition "room temperature  $>$  set temperature + f(heating compensation temperature) - 4.5°C + 1°C" occurs, the external heater is turned off, where 1°C is the hysteresis for determining whether to turn on or off the external heater.

## Additional information on SEG 3, 4, 5, 6, 8, 9

When SEG 3 is set to 1 and the HR-specific auto changeover function is run, the indoor unit operates as shown in the following figure:

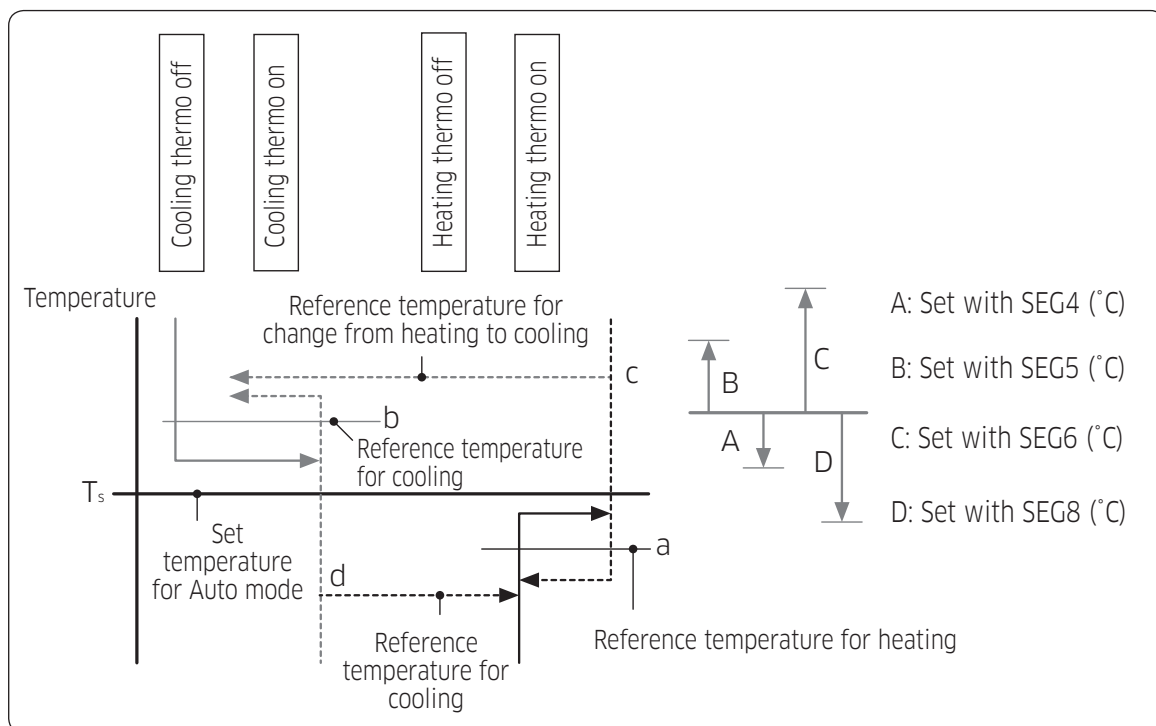

The mode change between the Cool and Heat modes is made only when the thermo off state is maintained for the period of time set with SEG9.



## Changing the addresses and options individually

When you want to change the value of a specific option, refer to the following table and follow the steps in **Common steps for setting the addresses and options** on page 20.

| Option                 | SEG1       |         | SEG2       |         | SEG3                         |         | SEG4                               |         | SEG5                                |         | SEG6       |         |
|------------------------|------------|---------|------------|---------|------------------------------|---------|------------------------------------|---------|-------------------------------------|---------|------------|---------|
| Function               | Page       |         | Mode       |         | Type of the option to change |         | Tens position of the option number |         | Units position of the option number |         | New value  |         |
| Indication and details | Indication | Details | Indication | Details | Indication                   | Details | Indication                         | Details | Indication                          | Details | Indication | Details |
|                        | 0          |         | D          |         | Option type                  | 0 to F  | Tens position value                | 0 to 9  | Units position value                | 0 to 9  | New value  | 0 to F  |

Example: Changing the Buzzer control (SEG17) option of the installation options to 1 disuse.

| Option     | SEG1 |  | SEG2 |  | SEG3                         |  | SEG4                               |  | SEG5                                |  | SEG6      |  |
|------------|------|--|------|--|------------------------------|--|------------------------------------|--|-------------------------------------|--|-----------|--|
| Function   | Page |  | Mode |  | Type of the option to change |  | Tens position of the option number |  | Units position of the option number |  | New value |  |
| Indication | 0    |  | D    |  | 2                            |  | 1                                  |  | 7                                   |  | 1         |  |



### CAUTION

- If your indoor units support both cooling and heating, the mixed operation (two or more indoor units operate in different modes simultaneously) is not available when the indoor units are connected to the same outdoor unit. If you set an indoor unit as the master indoor unit by using the remote control, the outdoor unit automatically operate in the current mode of the master indoor unit.


# Installation Procedure

## For the installation of the circular panel


### Making a circular opening on the ceiling

Use a paper compass printed on the indoor unit package. (attached inside to the upper part)


- 1 Use a bolt or a pin to fix pivot point of the paper compass on center of the ceiling. (in the middle of location for installation)

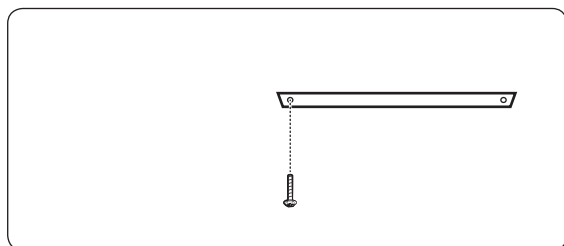


- 2 Put a pencil at the opposite side of the pivot point fixed in place.

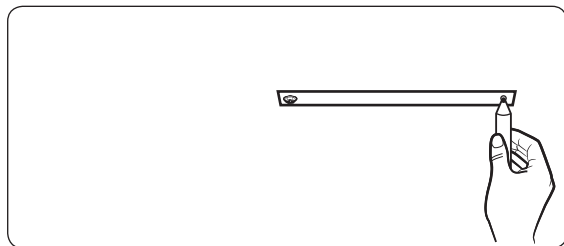

- 3 Rotate the paper compass on its pivot point to draw a line on the ceiling.

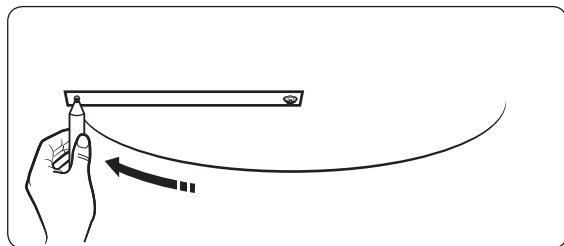

- 4 Rotate the paper compass diametrically to draw a circle on the ceiling.

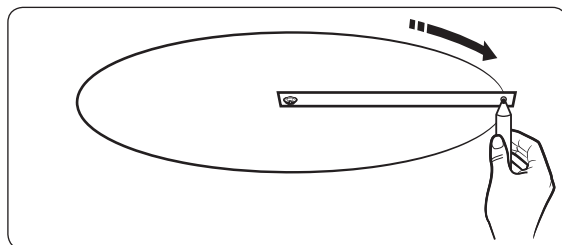

### For the painting of the panel

- Make sure to only apply paints and varnishes for resins (ABS, HIPS) or paint thinners.
- If you apply lacquers for general use on the panel, it may lead to discoloration or erosion on the surface of the panel.

# Troubleshooting

| Condition of the indoor unit                                                             | Error code | Indoor unit display indications |              |      |     |
|------------------------------------------------------------------------------------------|------------|---------------------------------|--------------|------|-----|
|                                                                                          |            | Ice blue                        | Yellow green | Blue | Red |
| Power reset (blinking once every 2 seconds)                                              | No error   | ●                               | X            | X    | X   |
| In the defrost operation (blinking once every 10 seconds)                                | No error   | ●                               | X            | X    | X   |
| Open or short circuit error of the indoor-temperature sensor                             | E121       | X                               | X            | X    | ●   |
| Open or short circuit error of the evaporator-in sensor                                  | E122       | X                               | ●            | X    | ●   |
| Open or short circuit error of the evaporator-out sensor                                 | E123       |                                 |              |      |     |
| Error of the fan in the indoor unit                                                      | E154       | X                               | X            | ●    | ●   |
| 1. Open or short circuit error of the outdoor-temperature sensor                         | E221       | X                               | X            | ●    | X   |
| 2. Open or short circuit error of the condenser sensor                                   | E237       |                                 |              |      |     |
| 3. Open or short circuit error of the discharge sensor                                   | E251       |                                 |              |      |     |
| Errors of the sensors of the outdoor unit other than the errors listed above             |            |                                 |              |      |     |
| 1. Error due to the opened EEV (2nd detection)                                           | E151       |                                 |              |      |     |
| 2. Error due to the closed EEV (2nd detection)                                           | E152       |                                 |              |      |     |
| 3. The evaporator-in sensor is detached.                                                 | E128       |                                 |              |      |     |
| 4. The evaporator-out sensor is detached.                                                | E129       |                                 |              |      |     |
| 5. The condenser mid sensor is detached.                                                 | E241       |                                 |              |      |     |
| 6. Refrigerant leakage (2nd detection)                                                   | E554       |                                 |              |      |     |
| 7. Abnormal high temperature on the condenser (2nd detection)                            | E554       |                                 |              |      |     |
| 8. Low pressure switch (2nd detection)                                                   | E451       |                                 |              |      |     |
| 9. Abnormal high temperature on the air discharged from the outdoor unit (2nd detection) | E416       |                                 |              |      |     |
| 10. The indoor unit stops due to an unknown error of the outdoor unit.                   | E559       |                                 |              |      |     |
| 11. Error of detection of a reverse phase                                                | E425       |                                 |              |      |     |
| 12. The compressor stops due to freeze detection (6th detection)                         | E403       |                                 |              |      |     |
| 13. The high pressure sensor is detached.                                                | E301       |                                 |              |      |     |
| 14. The low pressure sensor is detached.                                                 | E306       |                                 |              |      |     |

# Troubleshooting

| Condition of the indoor unit                                                                                    | Error code | Indoor unit display indications                                                     |                                                                                       |                                                                                       |                                                                                       |
|-----------------------------------------------------------------------------------------------------------------|------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|                                                                                                                 |            | Ice blue                                                                            | Yellow green                                                                          | Blue                                                                                  | Red                                                                                   |
| 15. Compression ratio error of the outdoor unit                                                                 | E428       | X                                                                                   | X                                                                                     |    | X                                                                                     |
| 16. Outdoor sump down_1 prevention control                                                                      | E413       |                                                                                     |                                                                                       |                                                                                       |                                                                                       |
| 17. Compressor shutdown due to the low-pressure-sensor prevention control_1                                     | E410       |                                                                                     |                                                                                       |                                                                                       |                                                                                       |
| 18. Simultaneous opening of the cooling and heating MCU SOL valves (1st detection)                              | E180       |                                                                                     |                                                                                       |                                                                                       |                                                                                       |
| 19. Simultaneous opening of the cooling and heating MCU SOL valves (2nd detection)                              | E181       |                                                                                     |                                                                                       |                                                                                       |                                                                                       |
| Self-diagnosis errors other than the errors listed above                                                        |            |                                                                                     |                                                                                       |                                                                                       |                                                                                       |
| No communication occurs between the indoor and outdoor units for 2 minutes.                                     | E101       | X                                                                                   |    | X                                                                                     | X                                                                                     |
| Communication error received from the outdoor unit                                                              | E102       |                                                                                     |                                                                                       |                                                                                       |                                                                                       |
| Error of 3 minute tracking on the outdoor unit                                                                  | E202       |                                                                                     |                                                                                       |                                                                                       |                                                                                       |
| The number of the installed indoor units that is transmitted via communication after the tracking is different. | E201       |                                                                                     |                                                                                       |                                                                                       |                                                                                       |
| Error of duplicated communication addresses (NASA only)                                                         | E108       |                                                                                     |                                                                                       |                                                                                       |                                                                                       |
| The communication address is not confirmed. (NASA only)                                                         | E109       |                                                                                     |                                                                                       |                                                                                       |                                                                                       |
| Communication errors other than the errors listed above                                                         |            |                                                                                     |                                                                                       |                                                                                       |                                                                                       |
| Error of the second detection of the float switch                                                               | E153       | X                                                                                   |  |  | X                                                                                     |
| EEPROM error                                                                                                    | E162       |  |  | X                                                                                     |  |
| EEPROM option error                                                                                             | E163       |                                                                                     |                                                                                       |                                                                                       |                                                                                       |
| Error of incompatibility of the indoor unit                                                                     | E164       |  | X                                                                                     | X                                                                                     |  |
| Error of mixed operation                                                                                        | E161       |  |  | X                                                                                     | X                                                                                     |
| Open circuit error of the thermal fuse                                                                          | E198       |  | X                                                                                     |  | X                                                                                     |

● : On,  : Blinking, X : Off

# Memo

---

# Memo

---



